

SealerSales KF-772DH

Direct Heat Portable

Clam Shell Sealer

Parts List





Provided by

MyBinding.com
When Image Matters.

Call Us at 1-800-944-4573

MyBinding.com
 5500 NE Moore Court
 Hillsboro, OR 97124
 Toll Free: 1-800-944-4573
 Local: 503-640-5920


■ KF-772DH Clam Shell Sealer Spare Parts D I A G R A M

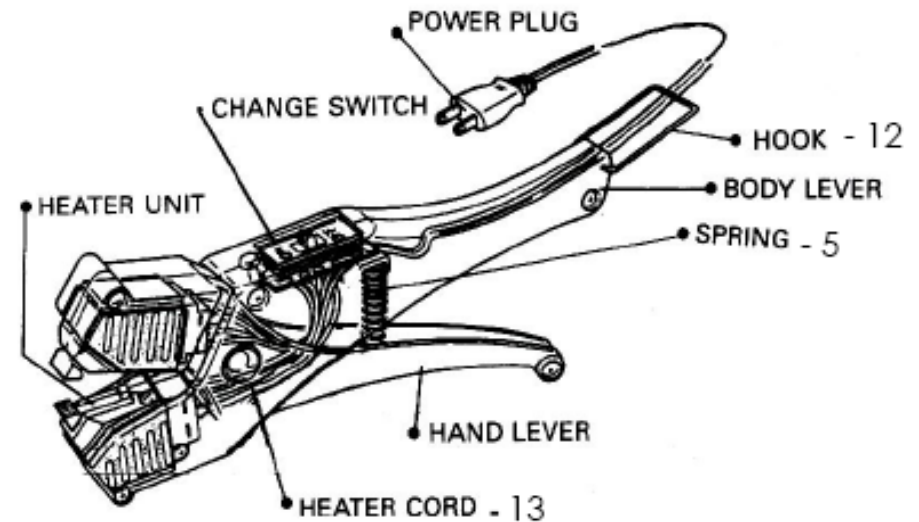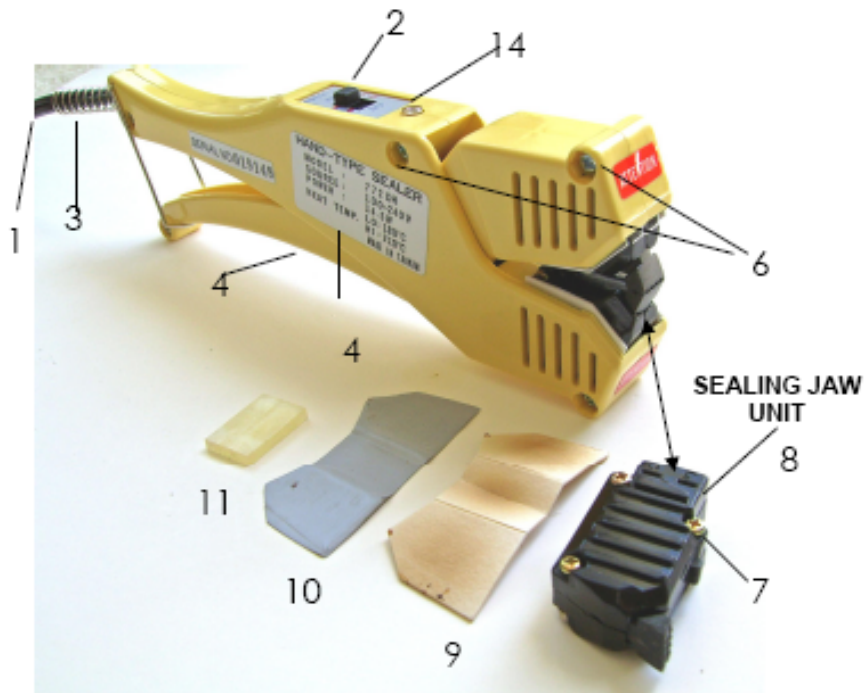

Detailed Parts of Sealing Jaw

Part Number	Description	Part Number	Description
1	Power / AC Cord	8	Top & Bottom Sealing Jaws Unit
2	Power Switch / Temp Switch w/PC Board	9	Insulator Plate (Inner)
3	Protected Spring (same as KF-150)	10	Rubber Plate (Outer)
4	Cover Set/Hand-Bottom & Body-Upper	11	Silicone Rubber (Top or Bottom)
5	Reverted Spring	12	Hook
6	Fixed Screw	13	Heater Cord with Power Switch, Protected Spring
7	Sealing Jaw Screw	14	Signal Light

Last Updated: 07/13/12

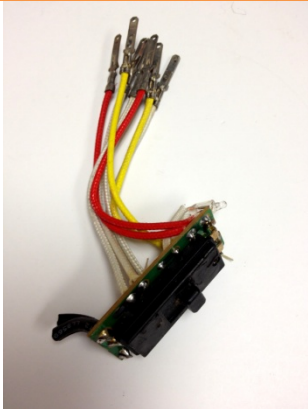

KF-772-2 – Power Switch w/ PC Board



KF-772-2a – Hi/Lo Indicating Plate



#3 – KF-150 – 3 – Protected Spring



KF-772-4 – Cover Set



KF-772-5



KF-772-6a – Fixed Screw




KF-772-6b – Fixed Screw




KF-772-7 – Sealing Jaw Screw




KF-772-8 – Sealing Jaw Unit

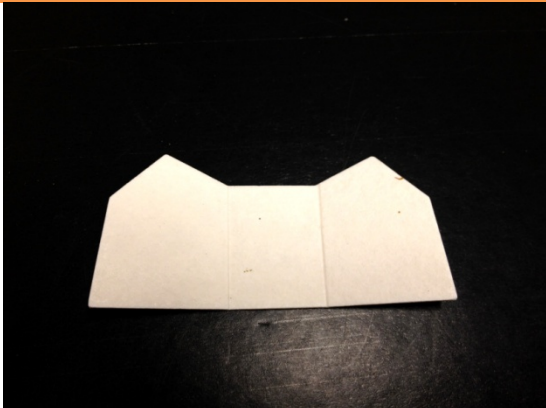

KF-772-9 – Insulator Plate (inner)

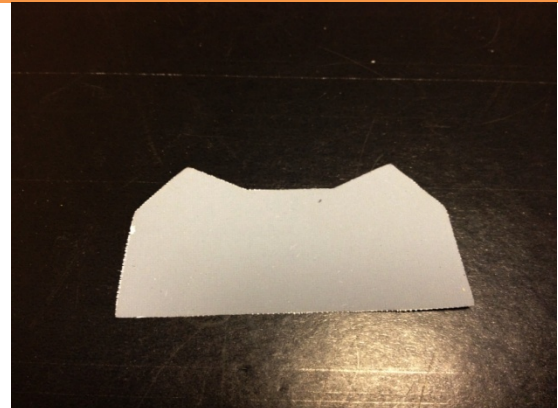

KF-150-10 – Rubber Plate (outer)

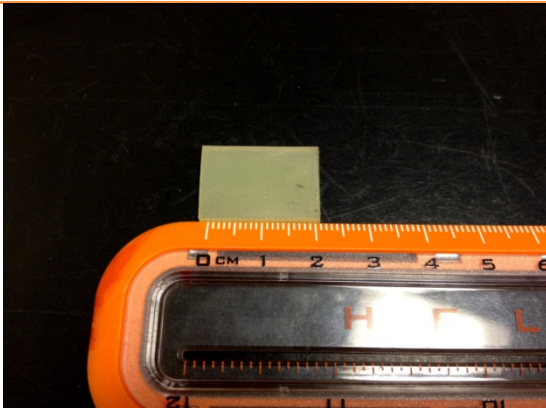

KF-772-11 – Silicone Rubber



KF-772-12 - Hook



KF-772-13 – Heater Cord with Power Switch and Protected Spring



KF-772-14a – Signal Light Cover