

## WARRANTY INFORMATION

Our machines are guaranteed against defects in materials and workmanship for a period of one year from the date of original purchase from an authorized dealer of TAMERICA PRODUCTS, INC. If you perceive or experience any issue with the machine, kindly report it to the dealer within 10 business days of said purchase to avail of free pickup and redelivery from TAMERICA's Service Center. After the first 10 days, you will either receive service instructions and parts via mail free of charge for the duration of the warranty.

Note that when returning the machine for warranty claims, the machine should be returned in its \*complete original packaging to avoid incidental or consequential damages that may void the claim. A copy of the invoice or other proof of purchase also needs to be sent with the machine.

Upon evaluation of the machine and the determination of the actual defect, the machine will be restored to its regular working condition by the Service Center and shipped back to you free of charge. If you change your mind and simply want to return the machine, a 20% restocking fee is charged even within the 10-day grace period. Further, you will have to cover freight to return the machine and it has to be in brand-new resalable condition, otherwise, you might incur more charges.

**This warranty covers all defects incurred in the normal use of the equipment except in the following cases:**

- Loss or damage to the equipment due to improper operation, abuse, mishandling or failure to follow the operating instructions.
- Removal or alteration of the serial number.
- The machine being serviced or modified by anyone other than a certified technician authorized by TAMERICA.

This warranty is valid only within the 48 Contiguous States. Hawaii and Alaska excluded.

**\* The original packaging must be kept for the duration of the warranty period.**



# TCC-1200HC

## 45" Hot Roll Laminator



## OPERATING MANUAL

### IMPORTANT !!!

It will be beneficial to first get yourself acquainted with the features of your TCC-16455WF before attempting to use. Keep in mind all operational instructions, tips, and safety reminders every time you use your machine to best achieve desirable results.

## INDEX

### FEATURES AND SAFETY INSTRUCTIONS

INTRODUCTION.....	3
SAFETY PRECAUTIONS.....	3
INSTALLATION.....	3
SPECIFICATIONS.....	4
PRODUCT IDENTIFICATION.....	4

### OPERATING

CONTROL PANEL.....	5
OPERATING THE MACHINE.....	5
TEMPERATURE AND SPEED MEMORY SETTINGS.....	6
ROLLER TENSION SETTINGS.....	7

### MAINTENANCE, SERVICE AND WARRANTY


MAINTENANCE .....	7
TROUBLESHOOTING .....	7
WARRANTY INFORMATION .....	8

## ROLLER TENSION SETTINGS

The tension is generally used at Tension 4.

### ⚠ ATTENTION

When not laminating, adjust the tension at Zero tension as shown on the image to the right.

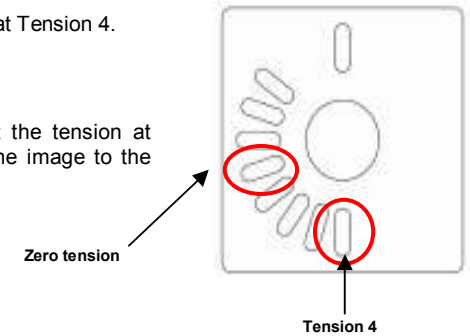


## MAINTENANCE

1. Disengage the rollers with Roller Press Handle when not in use. This will prevent the machine from overheating.
2. Be sure to turn off after use.
3. Operating with one roll of laminating film or when the upper and lower film are not properly aligned may leave melted resin on the rollers and may damage the following lamination.
4. Adjust to the adequate tension setting with the tension handle. If the tension is too tight, the film can be stretched.
5. Keep the rolls clean after using. Remaining debris and/or dust can cause low laminating quality.



## TROUBLESHOOTING

Symptom	Cause	Possible solution
Machine will not turn on	a. Power plug is not plugged in.	a. Plug the power cord into appropriate outlet
	b. Power switch is "off" position.	b. Put the power switch to the "on" position.
	c. Tripped circuit breaker.	c. Reset the circuit breaker.
	d. Blown main power fuse.	d. Replace the fuse.
There is power, but the rollers are not running after the hot button is pressed:	a. Emergency switch is engaged.	a. Disengage the emergency switch.
	b. Safety cover is not closed.	b. Close the safety cover to activate the safety switch.
	c. Guide table is not installed correctly.	c. Properly install the paper guide so that the micro switch is activated.
	d. Blown motor fuse.	d. Replace the motor fuse.
The unit is not heating up	a. The machine is in "COLD" mode.	a. Switch to "HOT" mode.
	b. Set temperature is lower than the room temperature.	b. Raise the temperature according to the recommended film temperature.
Curled lamination	a. Upward curl	a. Loosen the top roll film tension.
	b. Downward curl	b. Loosen the bottom roll film tension.
Unclear lamination	a. The main roller temperatures are too low and lamination speed is too fast.	a. Raise the roller temperatures and lower the lamination speed.

## COLD LAMINATING

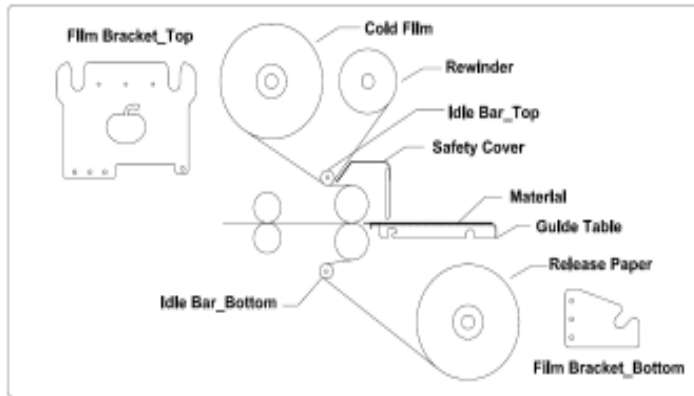


3. Turn the power switch on. Power switch is located in the rear of the unit
4. Remove the safety cover.
5. Remove the guide table. (see fig. 1)
6. Pull down the top film through the **Idle Bar\_Top** and attach it to the bottom roller. (see fig. 2)
7. Pull up the bottom film through the Idle Bar\_Bottom and attach it to the top film of top roller. (see fig. 3)
8. Set the safety cover and guide plate
9. Set the temperature and speed.
10. Align the material on the guide table and press the foot pedal.
11. After the laminated material has passed through the rollers, press the foot pedal to stop.
12. Adjust the roller tension by moving the handle located on the upper side.
13. Carefully pull out the laminating material in the back side of the machine.
14. Lamination can now be performed.

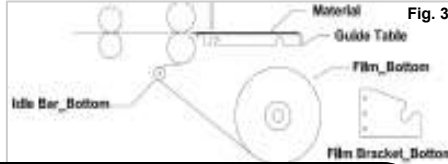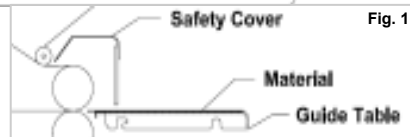

## TEMPERATURE AND SPEED MEMORY SETTINGS

The temperature and speed can be set for your convenience using the memory button. The machine will arrive with settings from factory but the memory values can be changed from M1-M8.

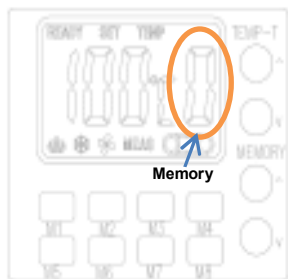

### How to change memory value:

1. Press and hold M1-M8 for 1 second, then set-up value.
2. Press up and down for temperature and speed.
3. Press M1-M8 button.

### **ATTENTION**

If the machine is not used for 1 hour, the temperature will go down to 85°C. Also, when the StBy button is pressed, the temperature will go down to 85°C. Lastly, if the machine is not used for 1 hour after StBy mode, it will turn off automatically.

## INTRODUCTION

Thank you for choosing TCC-1200HC Laminator. It has been designed and manufactured to provide years of continuous use. For complete operating and maintenance information, please read this manual thoroughly. Upon receipt for the laminator, please inspect the box, machine, and all other contents for shipping damage. Damage should be brought to the immediate attention of the delivery carrier.

## SAFETY PRECAUTIONS



Failure to comply with any of the following safety procedures could result in serious injury. Please read the instructions carefully and keep this manual for future reference.

1. Only a licensed electrician should install wiring and outlet for the laminator.
2. Ensure that the unit is plugged into a properly grounded outlet with correct voltage.
3. Do not allow articles of clothing (ties, scarves, etc.) near the machine openings as they could get caught by the rollers and pulled inside, causing serious personal injury.
4. Keep flammable and wet objects away from the machine.
5. To prevent possibility of electric shock, do not immerse machine in water or allow liquid to spill inside.
6. Avoid excessive sunlight, humidity and extreme temperatures.
7. Ensure that the machine is turned off, has cooled down and unplugged from the outlet prior to moving or performing repairs.
8. Keep away from children.
9. Do not open the case without being authorized by a technician.
10. Do not attempt to laminate items that exceed total recommended material thickness for the unit.
11. Do not touch rollers when they are hot.
12. Do not use flammable sprays or materials when cleaning the machine.

## INSTALLATION



**WARNING: The laminator should be installed by a trained service technician**


The laminator comes fully assembled, except for the guide table to avoid shipping damage. Upon arrival, thoroughly inspect the unit. It is imperative that any shipping damage is reported and a claim is filed with the delivering carrier immediately upon receipt.

The laminator should be located in an area with adequate work space for feeding graphics and laminating materials. Avoid placing the laminator in a dusty area or near sources of extreme heat or cold. Once the laminator is in the right place, lock the casters into position. Always unlock the casters when moving to a different location.

## SPECIFICATIONS


MODEL	TCC-1200HC
Max. Laminating width	46" (1170MM)
Max. Laminating speed	13ft / min.
Max. Mounting Thickness	1/2" / 13 mm
Heating system	Heated Rollers
Number of rollers	4
Temperature control	Yes
Speed control	Yes
Display	LCD
Warm-up time	10-12 mins
Power supply	AC 220 ~ 240 V / 50,60Hz
Power consumption	1,900 watts
Film Core Size	1", 2.25", 3" ( All in One )
Dimension (machine only)	57" x 18" x 11" / 1440 x 460 x 272mm
Weight	265 lbs. / 120kgs
Operating temperature	0-150°C / 0-302°F
Warranty	1 Year

## FEATURES

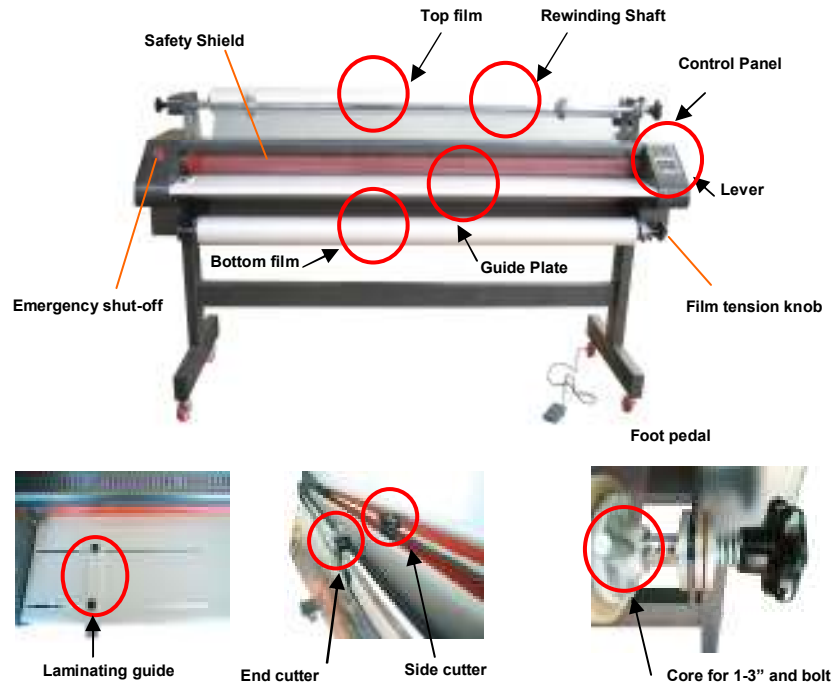

## CONTROL PANEL

When the machine is turned on, the LCD window will display the last working preset setting.

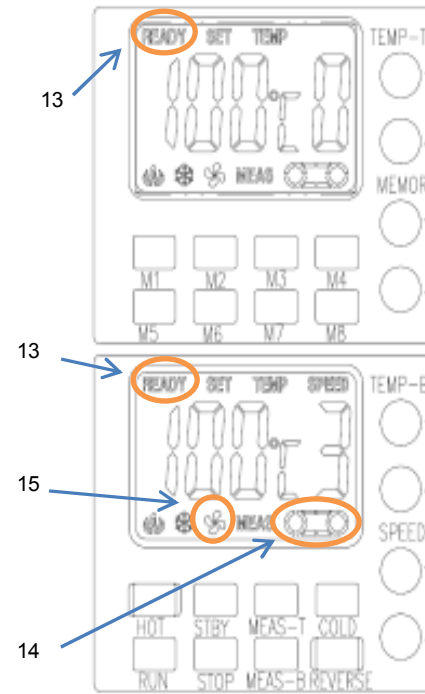

- TEMP-T ▲▼ : Adjust top roller temperature.
- TEMP-B ▲▼ : Adjust bottom roller temperature.
- SPEED ▲▼ : Variable speed from 1~9.
- MEMORY ▲▼ : Variable memory from 1~8
- M1~M8 : Change the Memory value
  - Press and hold the button for 1 second.
  - Select the temperature and speed.
  - Press the button.
- STBY : Temperature is set to 85°C
- MEAS-T/B : Measure the actual temperature of top and bottom rollers.
- RUN : Run rollers
- STOP : Stop rollers
- REVERSE : Reverse action.
- HOT : Initial setting to 110°C, speed 3.
- COLD : Cold laminating.
- READY : When the preset temperature is reached
- Rollers are running.
- Fans are running.

## HOW TO OPERATE THE MACHINE

- Install the top and bottom film brackets
- Load the film. The adhesive side facing the inside of roll = adhesive in.

## HOT LAMINATING

