

Best-Rite Nest Easel
- 2 Sided Laminate Whiteboard
with Silver Frame

Instruction Manual



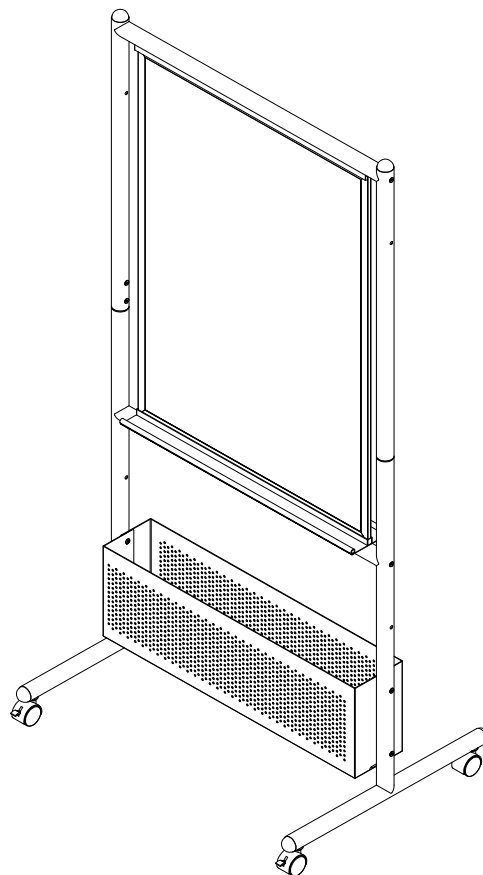 
Provided by

MyBinding.com
When Image Matters.

Call Us at 1-800-944-4573

Nest Easel











Adjustable Height Easel w/Storage Bin



Assembly Instructions

Nest Easel

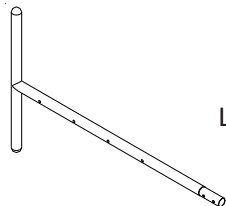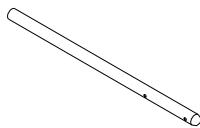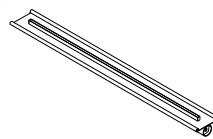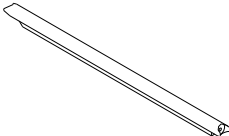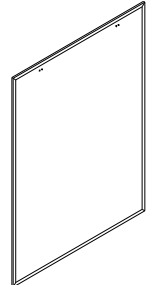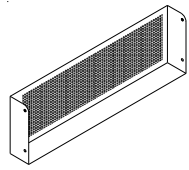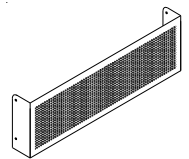          Adjustable Height Easel w/Storage Bin

Part	Drawing	Description	Qty																																								
P-1		Lower Leg	2 EA	Hardware List <table><tr><td>A</td><td></td><td>9/16" Socket Screw</td><td>4 EA</td></tr><tr><td>A1</td><td></td><td>1-3/32" Socket Screw</td><td>4 EA</td></tr><tr><td>B</td><td></td><td>2-3/8" Socket Screw</td><td>4 EA</td></tr><tr><td>C</td><td></td><td>Interior Threaded Post</td><td>4 EA</td></tr><tr><td>D</td><td></td><td>2" Locking Caster(for front)</td><td>2 EA</td></tr><tr><td>E</td><td></td><td>2" Caster(for Back)</td><td>2 EA</td></tr><tr><td>F</td><td></td><td>Plastic Chart Support</td><td>4 EA</td></tr><tr><td>G</td><td></td><td>Allen Wrench</td><td>2 EA</td></tr><tr><td>H</td><td></td><td>Caster Wrench</td><td>1 EA</td></tr></table>				A		9/16" Socket Screw	4 EA	A1		1-3/32" Socket Screw	4 EA	B		2-3/8" Socket Screw	4 EA	C		Interior Threaded Post	4 EA	D		2" Locking Caster(for front)	2 EA	E		2" Caster(for Back)	2 EA	F		Plastic Chart Support	4 EA	G		Allen Wrench	2 EA	H		Caster Wrench	1 EA
A		9/16" Socket Screw	4 EA																																								
A1		1-3/32" Socket Screw	4 EA																																								
B		2-3/8" Socket Screw	4 EA																																								
C		Interior Threaded Post	4 EA																																								
D		2" Locking Caster(for front)	2 EA																																								
E		2" Caster(for Back)	2 EA																																								
F		Plastic Chart Support	4 EA																																								
G		Allen Wrench	2 EA																																								
H		Caster Wrench	1 EA																																								
P-2		Upper Leg	2 EA																																								
P-3		MiddleTray	1 EA																																								
P-4		Top Support	1 EA																																								
P-5		Markerboard	1 EA																																								
P-6		Bookrack-Back	1 EA																																								
P-7		Bookrack-Front	1 EA																																								

Nest Easel Assembly Diagram

Illustration # 1

READ THROUGH INSTRUCTIONS FROM BEGINNING TO END BEFORE STARTING TO ASSEMBLE UNIT.

To Assemble:

1. Identify and Separate all the Parts and Hardware.
2. Attach Middle Tray (P-3) to 2 Lower Legs (P-1) at desired height using 2 Socket Screws (B) as shown in illustration # 1.
(Finger tighten only)

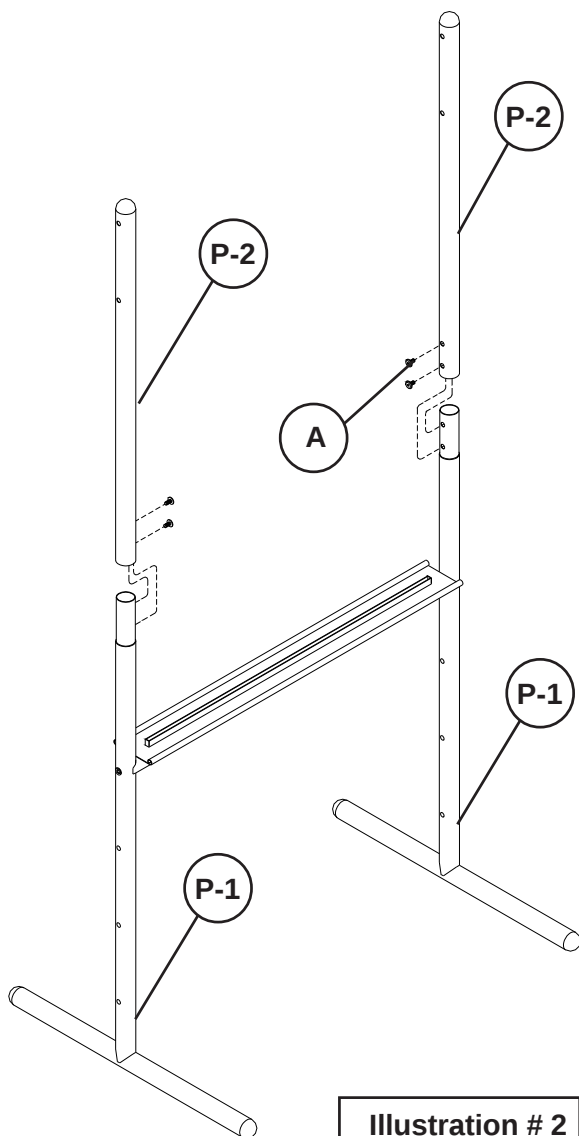 
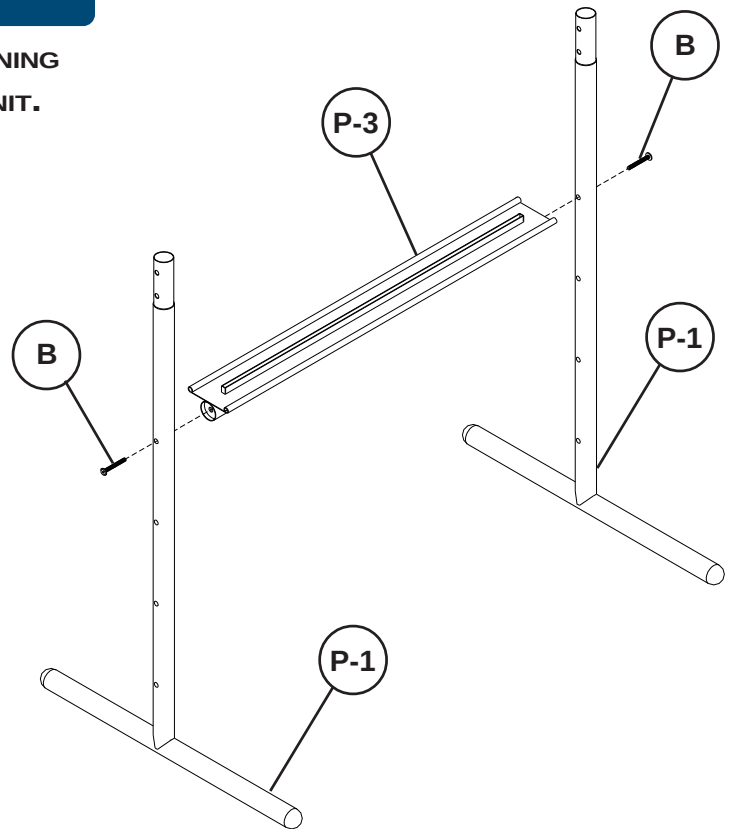 


Illustration # 2

3. Attach 2 each Upper Legs (P-2) to the 2 each Lower Legs (P-1) using 4 Socket Screws (A) as shown in illustration # 2.
(Finger tighten only)

4. Insert Markerboard (P-5) into Middle Tray (P-3) as shown in illustration # 3.

Illustration # 3

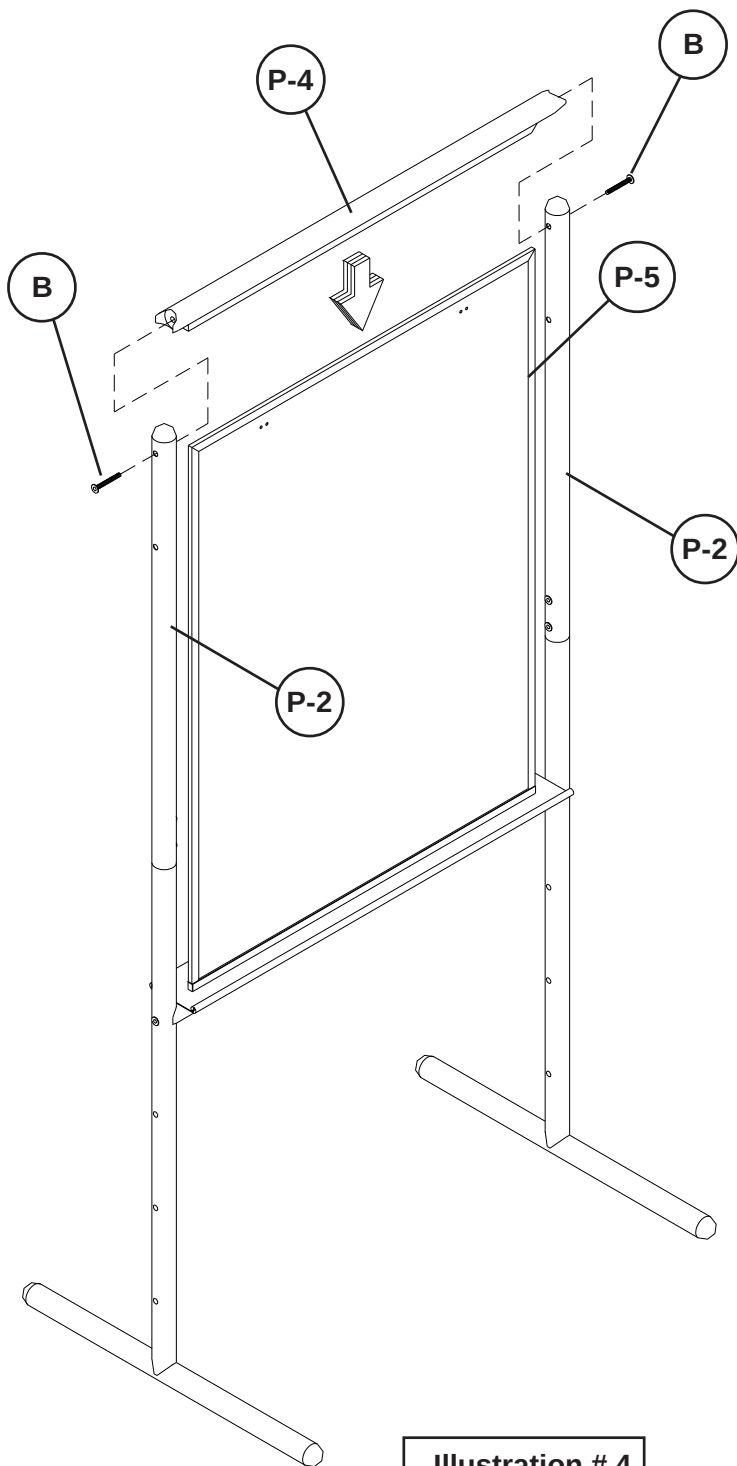 
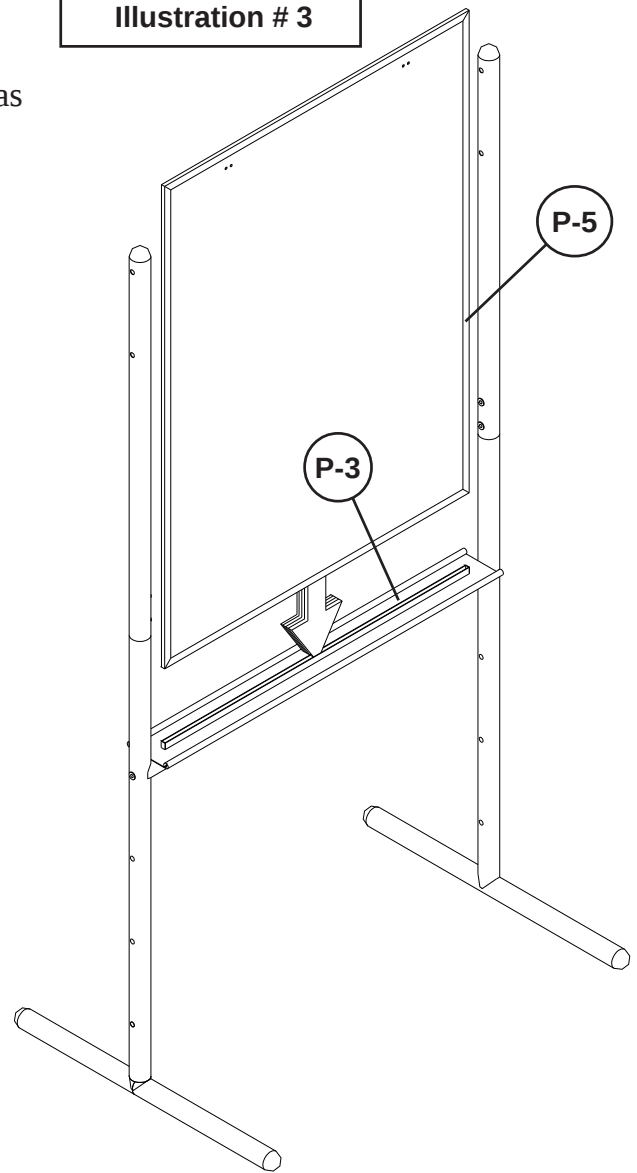 


Illustration # 4

5. Slide Top Support (P-4) over Markerboard (P-5) and secure to the 2 Upper Legs(P-2) using 2 each Socket Screws(B) as shown in illustration # 4. **(Finger tighten only)**




6. Attach Book Rack Front Panel (P-7) and Book Rack Back Panel (P-6) to the 2 Lower Leg Frames (P-1) using 4 Socket Screws (A1) and 4 Interior Threaded Posts (C) as shown in illustration # 5.

7. Attach 2 Locking Casters (D) in the front and 2 Casters (E) in the back of the unit as shown in illustration # 5.

Tighten the Casters using Caster Wrench (G).
(Tighten all Screws at this time)

8. Peel the paper from the back of adhesive pad on Plastic Chart Support (F).

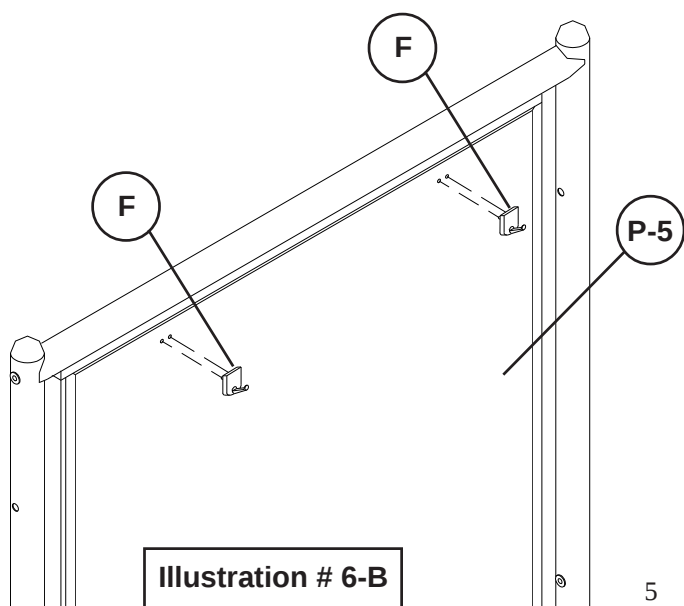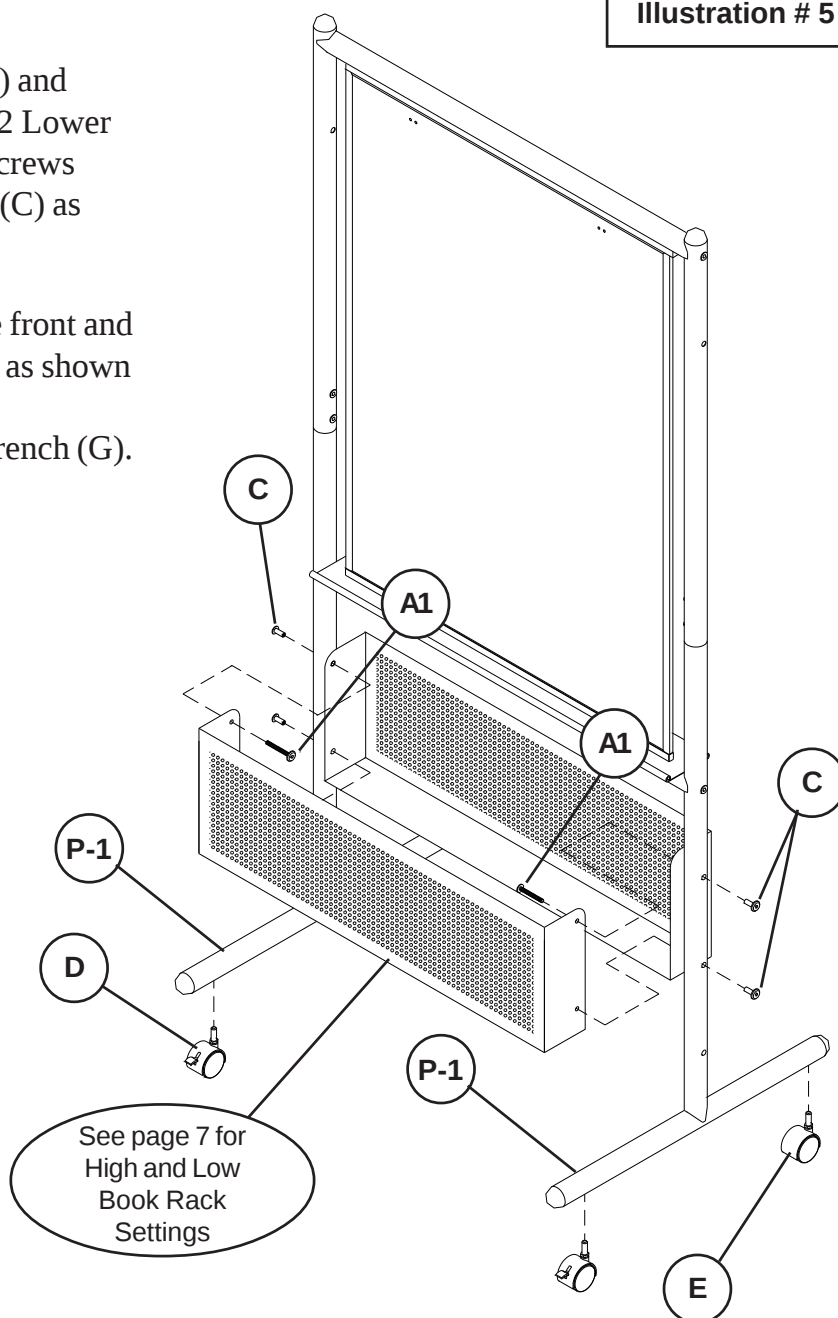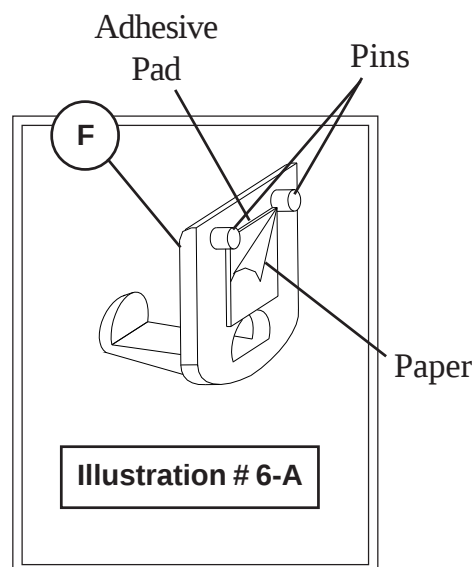   (See Illustration # 6-A)



9. Attach 2 Plastic Chart Supports on each side of board: Insert 2 pins on back side of Chart Support (F) through holes in markerboard (P-5) as shown in illustration # 6-B.

10. Press Plastic Chart Support (F) firmly to the Markerboard surface.

Nest Easel

Adjustable Height Easel w/Storage Bin

