

# ***Dahle CleanTEC 41322 Level P-5 Micro Cut Paper Shredder with FREE Oil***

Instruction Manual



*Provided by*

**MyBinding.com**


*When Image Matters.*

Call Us at 1-800-944-4573

# 41204 - 41634

## DAHLE CleanTEC®

## DAHLE Safe Technology

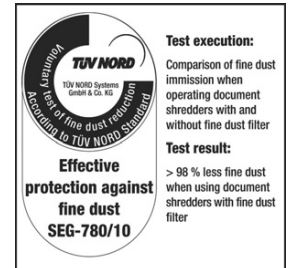

**DE** Bedienungsanleitung

**UK/US** Operating instructions

**FR** Instructions de service

**ES** Manual de instrucciones

**IT** Istruzioni per l'uso

**PT** Manual de instruções

**NL** Gebruiksaanwijzing





## General information


**Prior to placing in operation the document shredder, read the operating instructions and safety instructions carefully!**  
**Keep the instructions for later use.**

- Only store, transport and operate the document shredder in an upright position!
- Only use liquids and gases that comply with DAHLE guidelines on the document shredder!
- The document shredder must only be operated in closed rooms at temperatures of 15 °C to 32 °C and with a non-condensed humidity of 15% to 95%!
- Do not place the document shredder near a source of heat!
- Ensure the document shredder is standing firmly on the floor and with a distance of 100 mm to the wall; activate brakes and fasten using the mounting kit if supplied!
- Avoid any accumulation of heat!
- The mains socket must be easily accessible at all times!
- Only use the mains cable supplied by DAHLE!
- It is to be ensured the installation in the building is protected against short circuits (max. 20 A)!
- Do not use near inflammable liquids or gases!
- Do not use near caustic substances!
- Do not subject to moisture!
- Remove paper clips and staples prior to shredding!
- Starts automatically!
- Do not operate the document shredder without inserting documents!



- 1 - Follow safety regulations!
- 2 - **Prior to placing in operation the document shredder, read the operating instructions and safety instructions carefully!**
- 3 - This document shredder is not intended to be used by children (the product is not a toy)!
- 4 - Do not touch the paper feed with your hands!
- 5 - Do not allow items of clothing to touch the paper feed!
- 6 - Do not allow your hair to touch the paper feed!
- 7 - Prior to maintenance work, disconnect the document shredder from the electrical power supply!

### **Pay attention to warnings!**

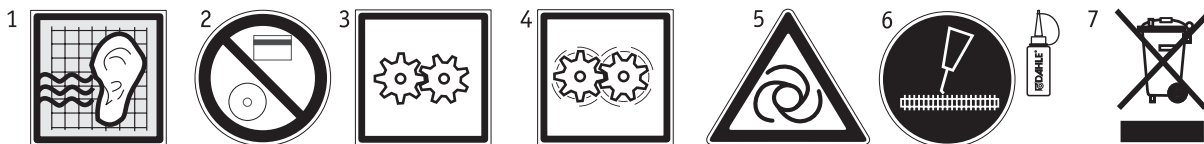

- 1 - Noise in operation without shredding documents (in accordance with DIN)
- 2 - Do not shred CDs/DVDs or bank cards/credit cards!
- 3 - Document shredder in standby
- 4 - Document shredder in operation
- 5 - Starts automatically
- 6 - Oiling (only use DAHLE oil!)
- 7 - Dispose of the document shredder appropriately and in an environmentally friendly manner at an authorised collection point. Do not dispose of any parts of the document shredder or packing in domestic waste.



## General information

### Intended use, warranty

The document shredder is intended to be used for shredding paper.

Depending on the model variant, a small amount of the following materials can also be shredded:

 
 

CDs/DVDs, bank cards and credit cards (see technical data)

Wear, damage due to improper use or unauthorised modifications and repairs is not covered by the warranty or the guarantee.

The fine dust filter fan keeps running for approximately 2 minutes after shredding.

### Subject to technical change!

### Remove transport lock!


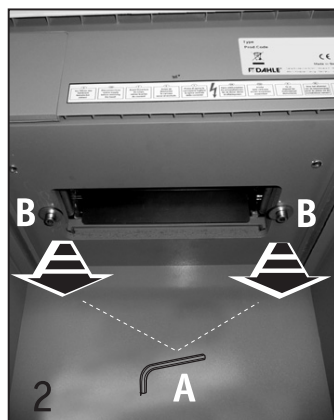


1. Actuate brakes! Prior to placing in operation for the first time, open the door, remove paper collection bin.
2. Remove the screws for the transport lock (paper collection bin compartment) from the base plate underneath the shredding mechanism, re-fit paper collection bin and close door.
3. Each time the appliance is moved, the transport lock is to be re-fitted.



# General information


Depending on the model variant, your document shredder may not have all the possible components and functions.

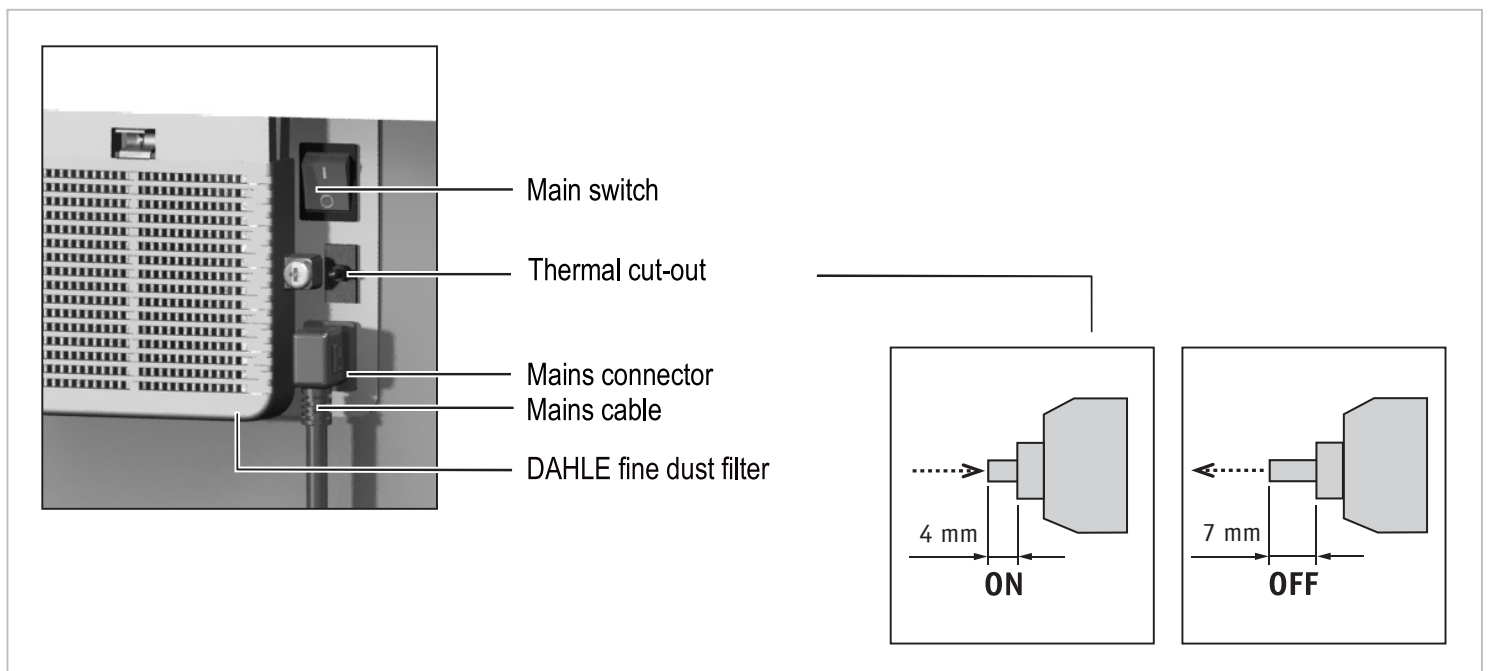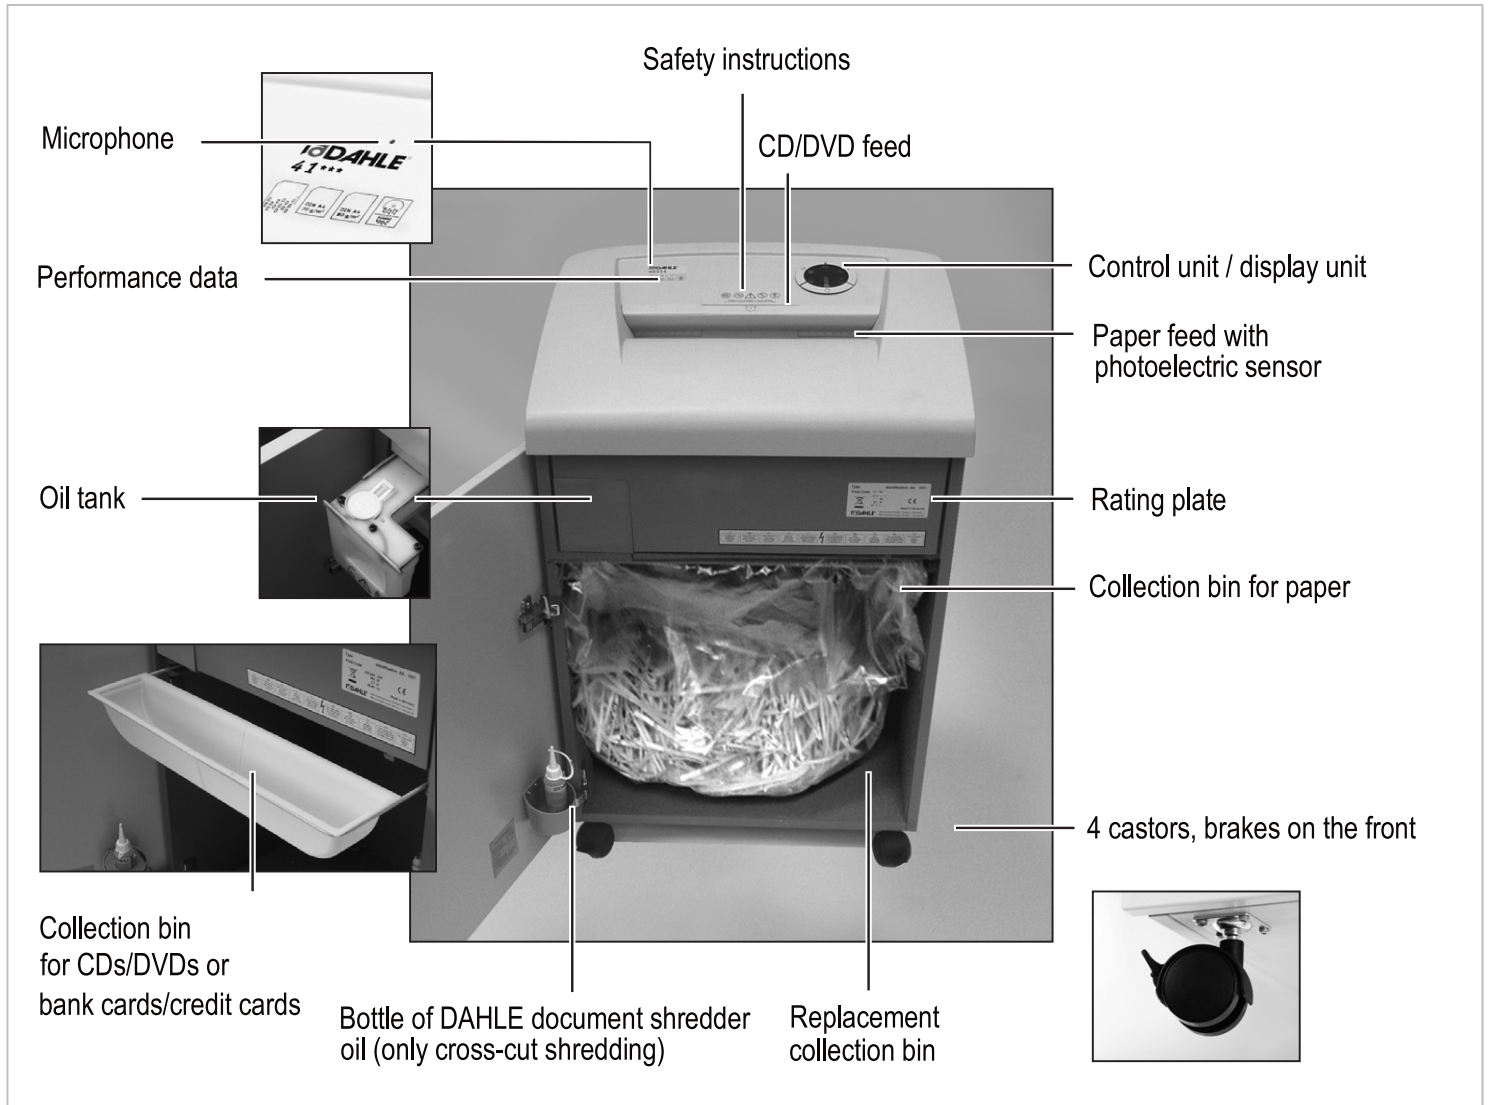



# General information

Depending on the model variant, your document shredder may not have all the possible components and functions.

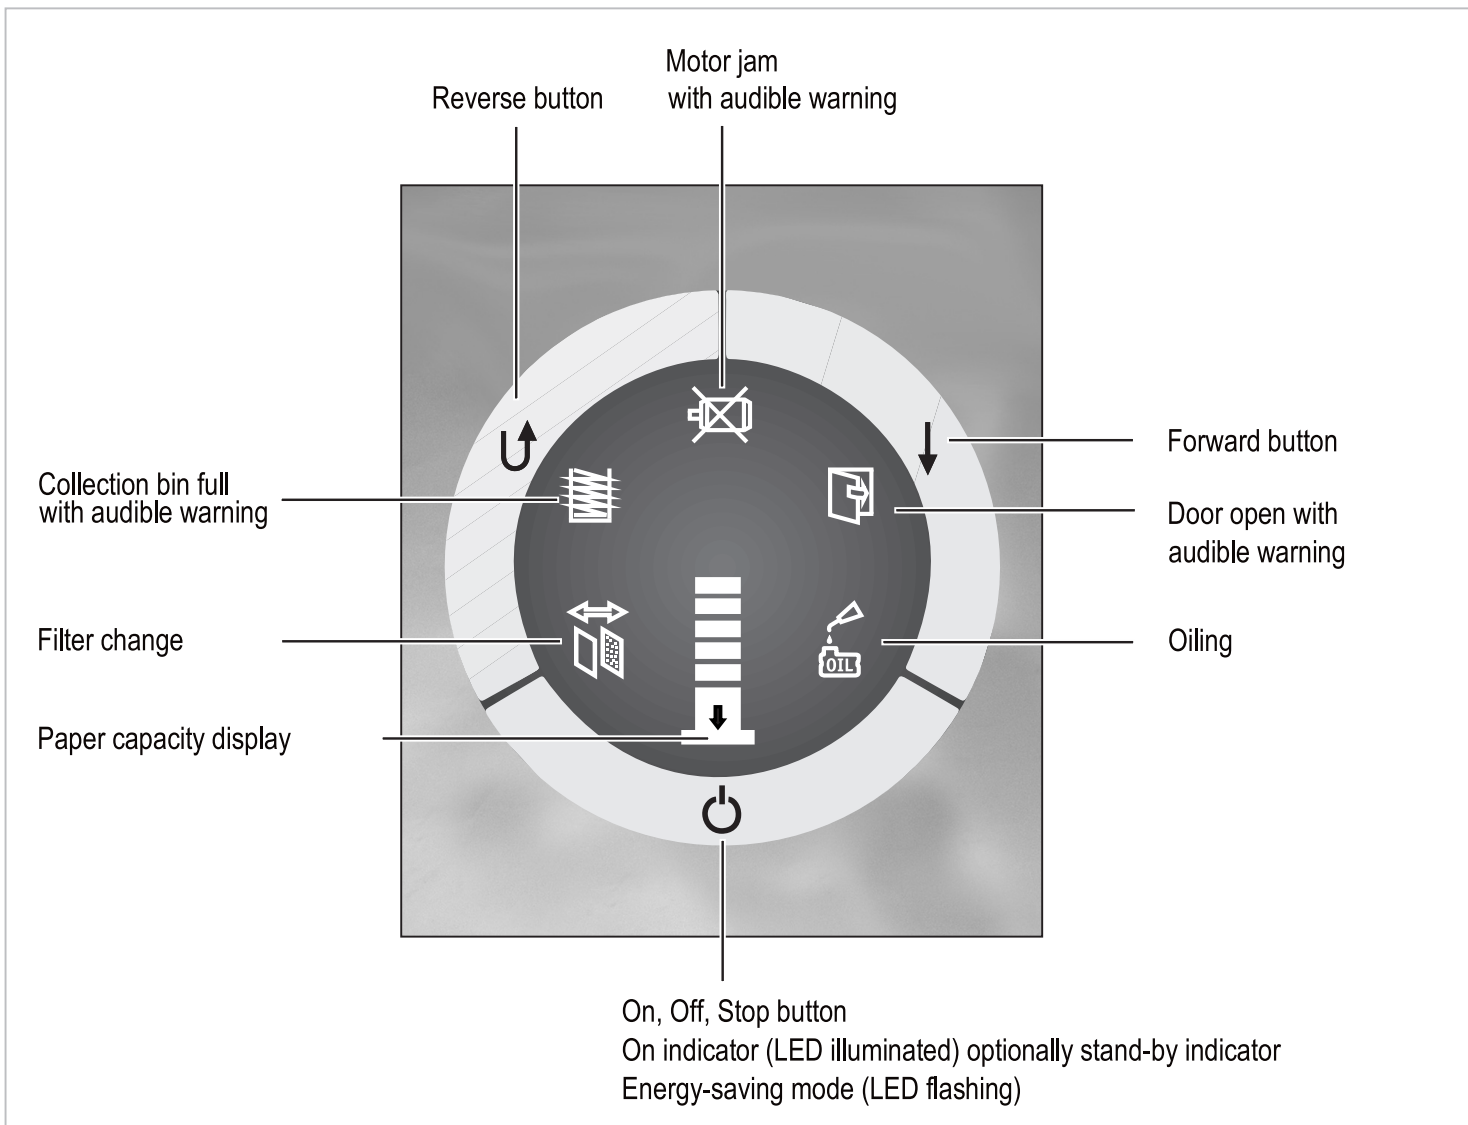

 
 





























 








Type  
Prod. Code

XXX-XXX V  
XX Hz

1. Check the voltage and mains frequency of your electricity supply match the information on the rating plate.







 













 


## Technische gegevens

	DIN A4 - 70 g/m <sup>2</sup>	DIN A4 - 80 g/m <sup>2</sup>			 	 	Security level
<b>41204</b>	17	14	3,9 mm				S2
<b>41206</b>	19	16	5,8 mm				S2
<b>41214</b>	10	8		3,9 mm x 40,0 mm			S3
<b>41222</b>	6	5		2,0 mm x 15,0 mm			S4
<b>41230</b>	3	2		0,8 mm x 12,0 mm			S5
<b>41304</b>	23	18	3,9 mm				S2
<b>41306</b>	27	22	5,8 mm				S2
<b>41314</b>	16	13		3,9 mm x 40,0 mm			S3
<b>41322</b>	11	9		2,0 mm x 15,0 mm			S4
<b>41330</b>	6	5		0,8 mm x 12,0 mm			S5
<b>41334</b>	6	5		1,0 mm x 4,7 mm			S6
<b>41404</b>	24	19	3,9 mm				S2
<b>41406</b>	29	23	5,8 mm				S2
<b>41414</b>	16	13		3,9 mm x 40,0 mm			S3
<b>41422</b>	13	10		2,0 mm x 15,0 mm			S4
<b>41430</b>	7	6		0,8 mm x 12,0 mm			S5
<b>41434</b>	6	5		1,0 mm x 4,7 mm			S6



 
 

 
## Technical data

			Dimensions H x W x D mm	 kg	Capacity
≤ 46 dB/A	220-240V 50-60Hz 350W 100-120V 50-60Hz 400W		706 x 430 x 347 mm	25,5 kg	40 l
≤ 47 dB/A	220-240V 50-60Hz 350W 100-120V 50-60Hz 400W		706 x 430 x 347 mm	25,5 kg	40 l
≤ 46 dB/A	220-240V 50-60Hz 350W 100-120V 50-60Hz 400W		706 x 430 x 347 mm	25,5 kg	40 l
≤ 47 dB/A	220-240V 50-60Hz 350W 100-120V 50-60Hz 400W		706 x 430 x 347 mm	25,5 kg	40 l
≤ 50 dB/A	220-240V 50-60Hz 350W 100-120V 50-60Hz 400W		706 x 430 x 347 mm	25,5 kg	40 l
≤ 46 dB/A	220-240V 50-60Hz 650W 100-120V 50-60Hz 680W		869 x 546 x 435 mm	40,0 kg	60 l
≤ 47 dB/A	220-240V 50-60Hz 650W 100-120V 50-60Hz 680W		869 x 546 x 435 mm	40,0 kg	60 l
≤ 46 dB/A	220-240V 50-60Hz 650W 100-120V 50-60Hz 680W		869 x 546 x 435 mm	40,0 kg	60 l
≤ 46 dB/A	220-240V 50-60Hz 650W 100-120V 50-60Hz 680W		869 x 546 x 435 mm	40,0 kg	60 l
≤ 47 dB/A	220-240V 50-60Hz 650W 100-120V 50-60Hz 680W		869 x 546 x 435 mm	40,0 kg	60 l
≤ 50 dB/A	220-240V 50-60Hz 650W 100-120V 50-60Hz 680W		869 x 546 x 435 mm	40,0 kg	60 l
≤ 51 dB/A	220-240V 50-60Hz 650W 100-120V 50-60Hz 900W		944 x 546 x 435 mm	43,0 kg	100 l
≤ 51 dB/A	220-240V 50-60Hz 650W 100-120V 50-60Hz 900W		944 x 546 x 435 mm	43,0 kg	100 l
≤ 52 dB/A	220-240V 50-60Hz 650W 100-120V 50-60Hz 900W		944 x 546 x 435 mm	43,0 kg	100 l
≤ 53 dB/A	220-240V 50-60Hz 650W 100-120V 50-60Hz 900W		944 x 546 x 435 mm	43,0 kg	100 l
≤ 52 dB/A	220-240V 50-60Hz 650W 100-120V 50-60Hz 900W		944 x 546 x 435 mm	43,0 kg	100 l
≤ 52 dB/A	220-240V 50-60Hz 650W 100-120V 50-60Hz 900W		944 x 546 x 435 mm	43,0 kg	100 l





















Technical data

	DIN A4 - 70 g/m	DIN A4 - 80 g/m					Security level
<b>41504</b>	33	26	3,9 mm		<input type="checkbox"/>	<input type="checkbox"/>	S2
<b>41506</b>	43	35	5,8 mm		<input type="checkbox"/>	<input type="checkbox"/>	S2
<b>41514</b>	26	21		3,9 mm x 40,0 mm	<input type="checkbox"/>	<input type="checkbox"/>	S3
<b>41522</b>	19	15		2,0 mm x 15,0 mm	<input type="checkbox"/>	<input type="checkbox"/>	S4
<b>41530</b>	11	9		0,8 mm x 12,0 mm	<input type="checkbox"/>	<input type="checkbox"/>	S5
<b>41534</b>	9	7		1,0 mm x 4,7 mm	<input type="checkbox"/>	<input type="checkbox"/>	S6
<b>41604</b>	35	28	3,9 mm		<input type="checkbox"/>	<input type="checkbox"/>	S2
<b>41606</b>	45	36	5,8 mm		<input type="checkbox"/>	<input type="checkbox"/>	S2
<b>41614</b>	30	24		3,9 mm x 40,0 mm	<input type="checkbox"/>	<input type="checkbox"/>	S3
<b>41622</b>	20	16		2,0 mm x 15,0 mm	<input type="checkbox"/>	<input type="checkbox"/>	S4
<b>41630</b>	14	11		0,8 mm x 12,0 mm	<input type="checkbox"/>	<input type="checkbox"/>	S5
<b>41634</b>	11	9		1,0 mm x 4,7 mm	<input type="checkbox"/>	<input type="checkbox"/>	S6



## Technical data

			Dimensions H x W x D mm	 kg	Capacity
$\leq 47$ dB/A	220-240V 50-60Hz 900W 100-120V 50-60Hz 900W		890 x 734 x 510 mm	25,5 kg	140 l
$\leq 46$ dB/A	220-240V 50-60Hz 900W 100-120V 50-60Hz 900W		890 x 734 x 510 mm	25,5 kg	140 l
$\leq 52$ dB/A	220-240V 50-60Hz 900W 100-120V 50-60Hz 900W		890 x 734 x 510 mm	25,5 kg	140 l
$\leq 53$ dB/A	220-240V 50-60Hz 900W 100-120V 50-60Hz 900W		890 x 734 x 510 mm	25,5 kg	140 l
$\leq 50$ dB/A	220-240V 50-60Hz 900W 100-120V 50-60Hz 900W		890 x 734 x 510 mm	25,5 kg	140 l
$\leq 52$ dB/A	220-240V 50-60Hz 900W 100-120V 50-60Hz 900W		890 x 734 x 510 mm	40,0 kg	140 l
$\leq 58,5$ dB/A	220-240V 50-60Hz 1650W 100-120V 50-60Hz 1650W		960 x 734 x 510 mm	40,0 kg	160 l
$\leq 56$ dB/A	220-240V 50-60Hz 1650W 100-120V 50-60Hz 1650W		960 x 734 x 510 mm	40,0 kg	160 l
$\leq 57$ dB/A	220-240V 50-60Hz 1650W 100-120V 50-60Hz 1650W		960 x 734 x 510 mm	40,0 kg	160 l
$\leq 55,5$ dB/A	220-240V 50-60Hz 1650W 100-120V 50-60Hz 1650W		960 x 734 x 510 mm	40,0 kg	160 l
$\leq 60$ dB/A	220-240V 50-60Hz 1650W 100-120V 50-60Hz 1650W		960 x 734 x 510 mm	40,0 kg	160 l
$\leq 62$ dB/A	220-240V 50-60Hz 1650W 100-120V 50-60Hz 1650W		960 x 734 x 510 mm	40,0 kg	160 l




## Operation - shredding paper

Depending on the model variant, your document shredder may not have all the possible components and functions.



1.

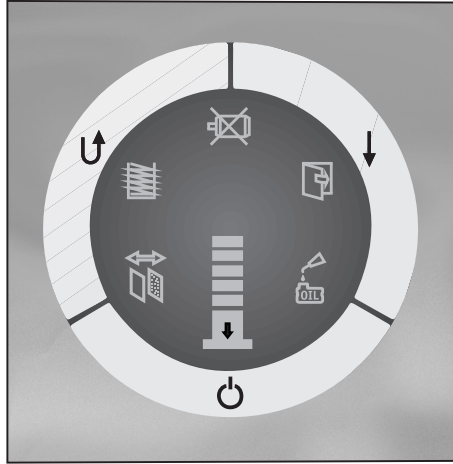


Please follow the safety instructions.

1. Prior to using the document shredder, please check the position of the collection bin for CDs/DVDs and bank cards/credit cards. On shredding paper this bin must be at the front of the collection bin for paper.
2. Close the door of the document shredder.
3. Connect the mains cable supplied to the document shredder and plug into a mains socket. Switch on the main switch.
4. Switch on the document shredder with the On, Off, Stop button.



1.1

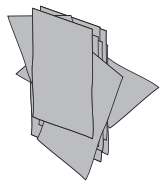

O.K.




1. Pay attention to maximum number of sheets of paper in the technical data!
2. Place the paper in the middle of the paper feed, the built-in photoelectric sensor starts the document shredder automatically.
3. Once the paper feed is clear again, the document shredder switches off automatically and goes into stand-by.
4. Continuous operation - after extended operation (approx. 5 sec.) of the forward button, the document shredder changes to continuous operation.
5. If the supply of paper is interrupted for 15 seconds, continuous operation is interrupted.



## Operation - shredding CDs/DVDs & bank cards

Depending on the model variant, your document shredder may not have all the possible components and functions.

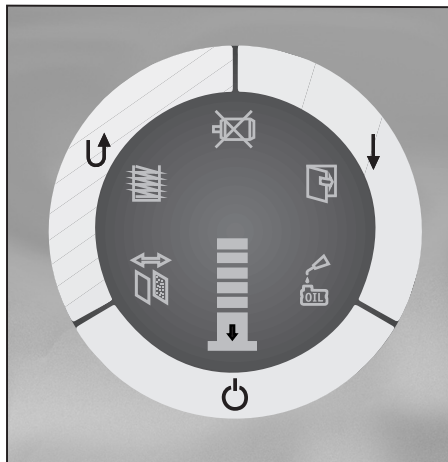

Please follow the safety instructions.

1. Prior to using the document shredder, please check the position of the collection bin for CDs/DVDs and bank cards/credit cards. On shredding CDs/DVDs and bank cards/credit cards this bin must be at the rear of the collection bin for paper.
2. Pull out collection bin and position the collection bin for CDs/DVDs and credit cards/bank cards at the rear.
3. Close the door of the document shredder.



1. Insert the CDs, DVDs or bank cards/credit cards in the middle of the feeder while keeping the Forward button pressed.
2. Once the CD/DVD feed is clear again, the document shredder switches off automatically and goes into stand-by.






## Significance of the signals

 
Depending on the model variant, your document shredder may not have all the possible components and functions.

### DAHLE CleanTEC®

Changing DAHLE fine dust filter

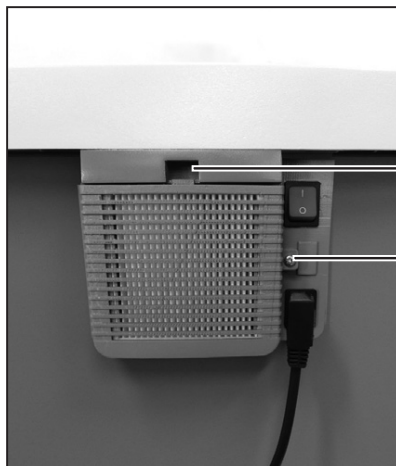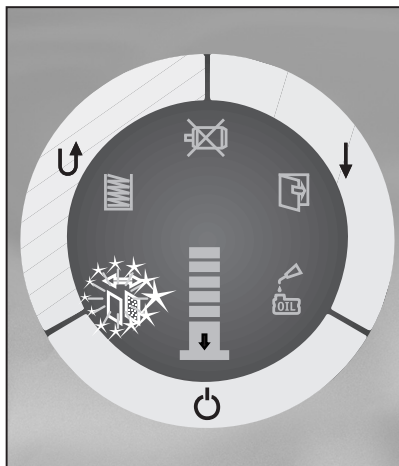

1. The filter change indicator (change DAHLE fine dust filter!) is illuminated on the control panel.
2. Unplug the mains cable from the mains socket.
3. Change the fine dust filter on the rear of the appliance.
  - A. Undo screw
  - B. Press catch and remove cover
  - C. Remove filter and dispose of it.
  - D. It is imperative you fit a new DAHLE fine dust filter!
  - E. Close cover
  - F. Tighten screw
4. Plug the mains cable into the mains socket, switch on the main switch and the On, Off, Stop button.
5. Reset filter change indicator: Keep the Forward and Reverse buttons pressed simultaneously for approx. 5 seconds.

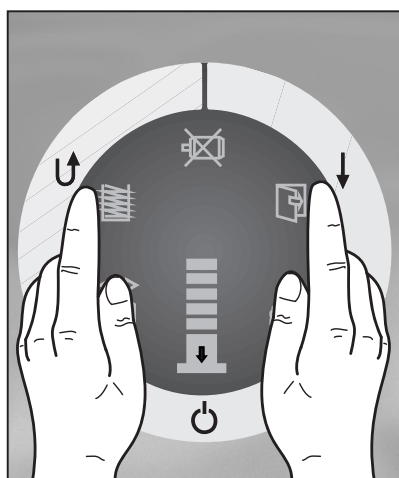

We do not accept any liability for improper use of the DAHLE fine dust filter or for not changing the DAHLE fine dust filter.

The waste DAHLE fine dust filter can be disposed in the domestic waste.

The fine dust particles are bound into the DAHLE fine dust filter.

Please dispose of the DAHLE fine dust filter in a manner so that it is inaccessible for children.




## Significance of the signals

Depending on the model variant, your document shredder may not have all the possible components and functions.

### DAHLE Safe Technology





Paper capacity display - Continuous paper volume measurement for smooth operation.

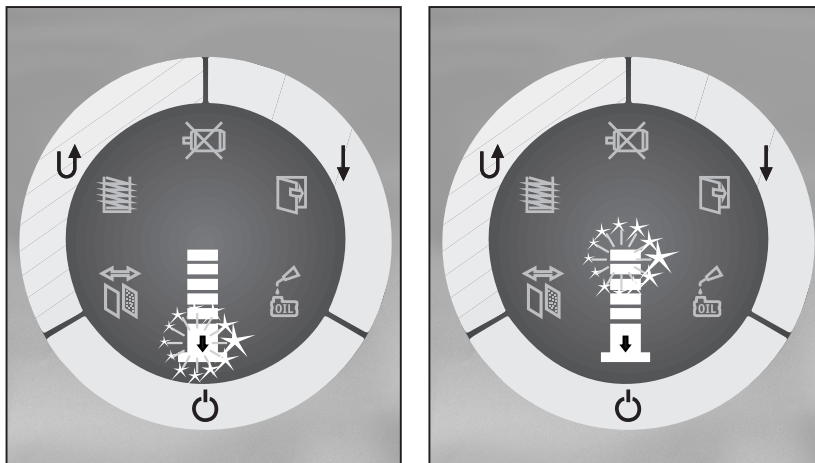

Safe Technology - checks the material density prior to the start.  
If the density is too high, the shredding process is inhibited.  
Reduce the number of sheets of paper.

### DAHLE Safe Technology

 Automatic acoustic shut down - for immediate motor stop by voice control or by tapping the appliance.

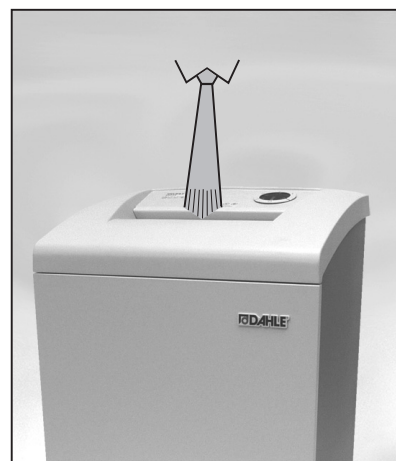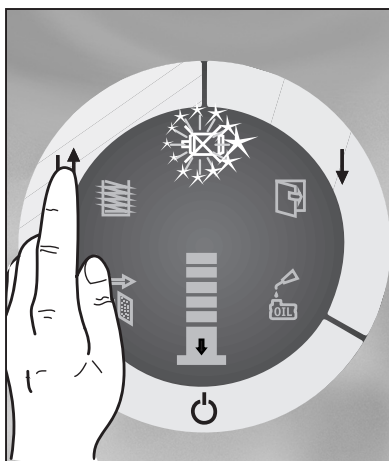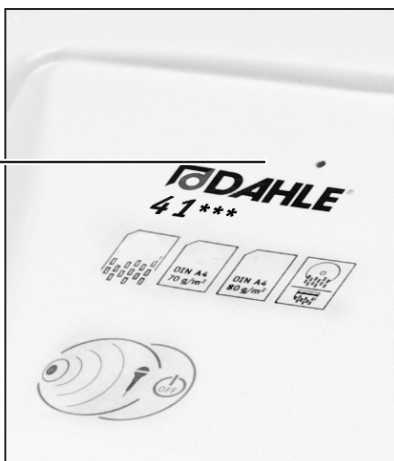

1. The shredding process is stopped by voice control or by tapping the appliance.
2. Operate the Reverse button to retrieve the foreign body out of the shredding mechanism.
3. Reset the motor inhibit indicator by switching on and off.



## Significance of the signals

Depending on the model variant, your document shredder may not have all the possible components and functions.

### DAHLE Safe Technology


Automatic oiling - only for cross-cut shredding

Fill oil tank with DAHLE document shredder oil.


Integrated oil tank for regulated, automatic oiling of the rollers.



4.

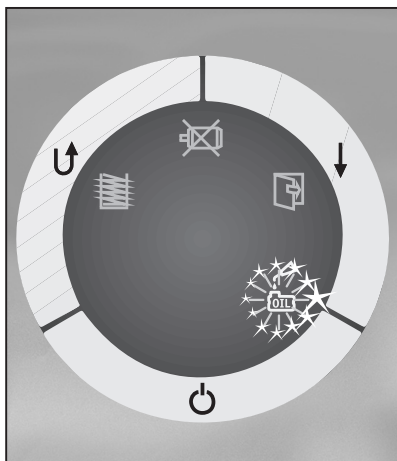

2

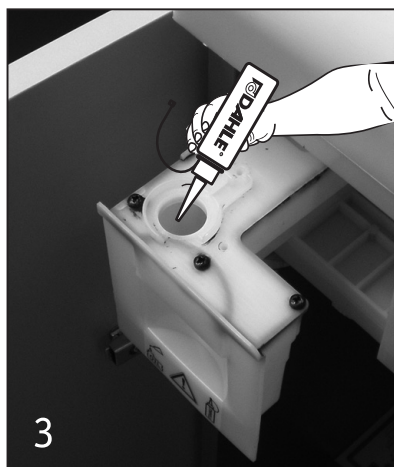

3

Fill the integrated oil tank in the document shredder in case of indication on the display.

1. Switch off the document shredder with the On, Off, Stop button.
2. Open the door, the integrated oil tank is in the cabinet, open the cap.
3. Fill oil tank with oil (use DAHLE document shredder oil!) and close again.



4.1

Attention - 115 V


It is only possible to shred paper after filling (use DAHLE document shredder oil!) the oil tank.



## Significance of the signals

Depending on the model variant, your document shredder may not have all the possible components and functions.

Collection bin full - the LED flashes and an audible warning sounds.

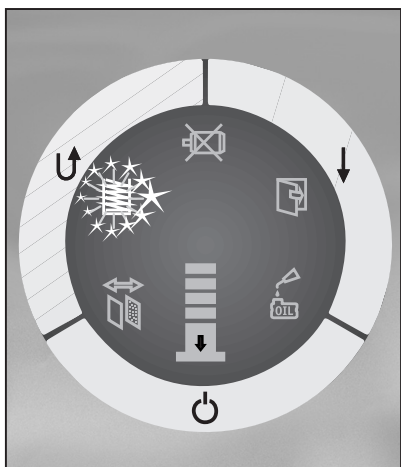

1. If the collection bin is full, the shredding process is stopped, this situation is indicated acoustically and optically.
2. Switch off the main switch and unplug the mains cable from the mains socket.
3. Remove collection bin, empty and re-fit.
4. Plug the mains cable into the mains socket and switch on the main switch.






## Significance of the signals


Depending on the model variant, your document shredder may not have all the possible components and functions.

Automatic motor shut down - the LED flashes and an audible warning sounds.

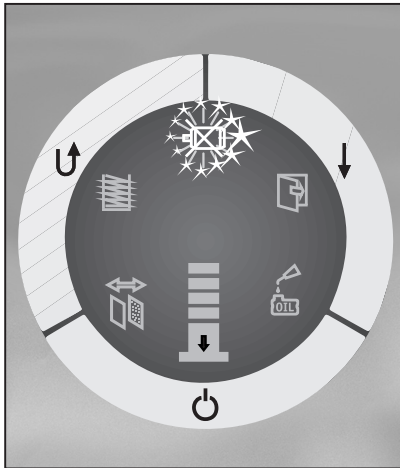

1. Automatic motor shut down with audible warning in case of:
  - Overheating of the motor
  - Paper jam
  - Microphone triggered

Door open - the LED flashes and an audible warning sounds.

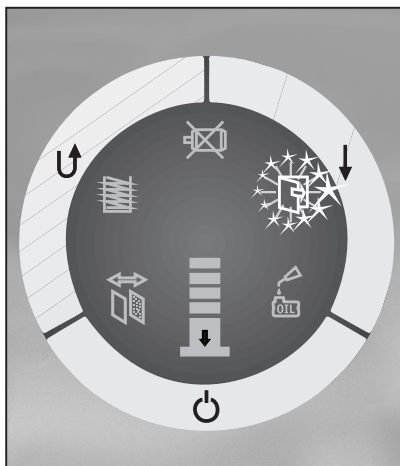


1. If the door is open, the shredding process is stopped and a signal sounds, close the door.




## Changing the settings

### Changing the microphone sensitivity

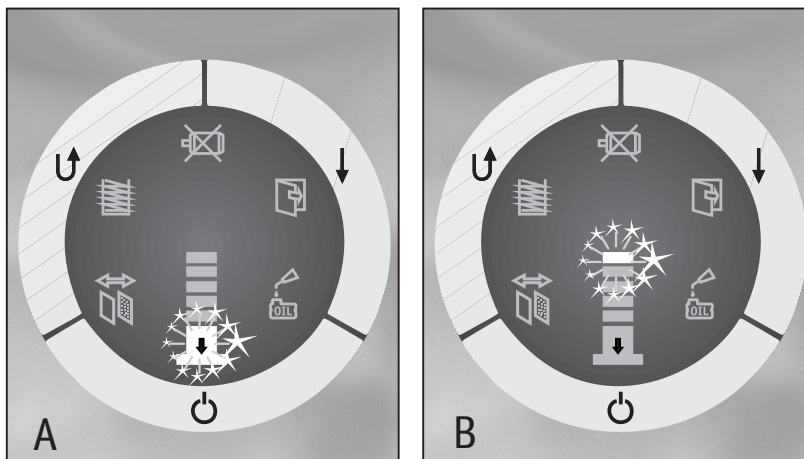

1. Switch on the document shredder with the On, Off, Stop button.
2. Press the On, Off, Stop button for approx. 5 seconds, the current microphone setting is indicated on the paper capacity display.
3. Use the Reverse button to increase the microphone sensitivity (B).
4. Use the Forward button to reduce the microphone sensitivity (A).
5. Confirm your setting by pressing the On, Off, Stop button.

### Changing the factory setting to: - Different paper (see technical data) - Correct the performance in terms of sheets

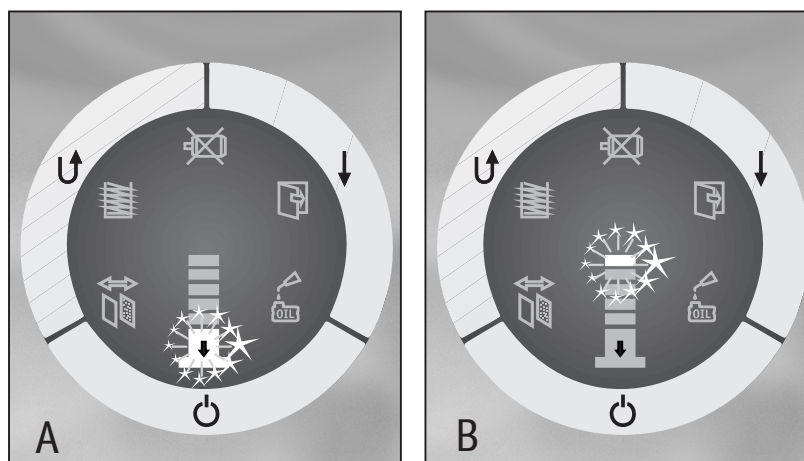

1. The paper feed must be clear.
2. Switch off the appliance with the On, Off, Stop button.
3. Within 5 seconds press the Reverse button for approx. 6 seconds until the paper capacity display (A) 1x illuminates.
4. Place the required amount of paper/different paper (pay attention to technical data) in the paper feed with photoelectric switch and hold.
5. Keep Forward button pressed for approx. 6 seconds until the paper capacity display (A) illuminates 1x.
6. Fig. A - small amount of paper. Fig. B - too much paper. Please start at 1.
7. The factory setting has been changed. Switch on the document shredder again with the On, Off, Stop button.




## Changing the settings

### Restoring the factory setting



3.

1. Switch off the appliance with the On, Off, Stop button.
2. Keep the On, Off, Stop button pressed for 4 seconds.
3. Release the On, Off, Stop button again after the second audible warning.

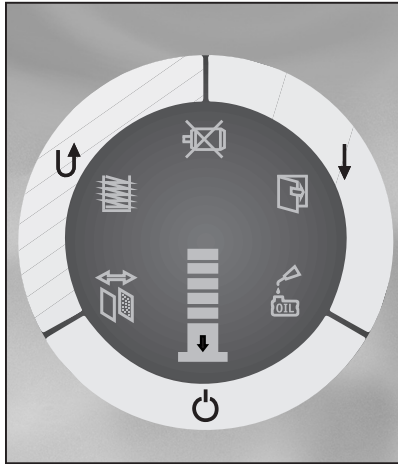


4. The factory setting has been restored.



# Possible malfunctions

Depending on the model variant, your document shredder may not have all the possible components and functions.

1.

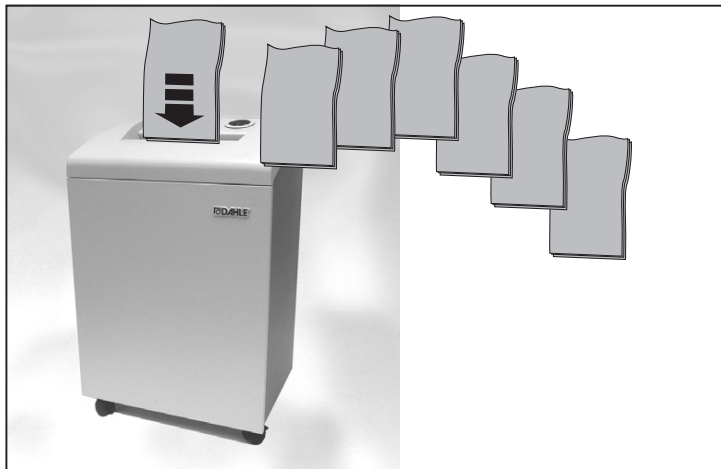

The document shredder switches off automatically after extended operation and/or overheating to cool down.

2.






Thermal cut-out

1. The shredding process is not started:

- 1.1 No indication on the control panel - LED not illuminated
  - Mains cable not plugged into the mains socket?
  - Main switch not on?
  - On, Off, Stop button not switched on?
  - Thermal cut-out OFF?

1.2 Indication on the control panel

- LED illuminated
  - Door open?
  - Collection bin full?
  - Overload?
  - Oil tank empty (115 V)?
  - Too many sheets of paper

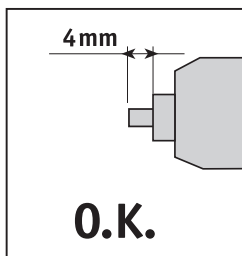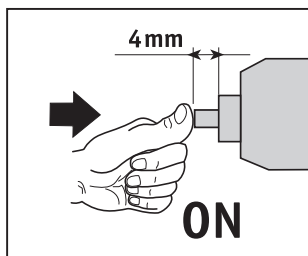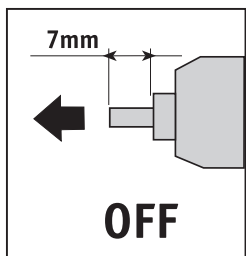


Place the thermal cut-out in the correct position - ON.


## ? Possible malfunctions

Depending on the model variant, your document shredder may not have all the possible components and functions.

? 3.

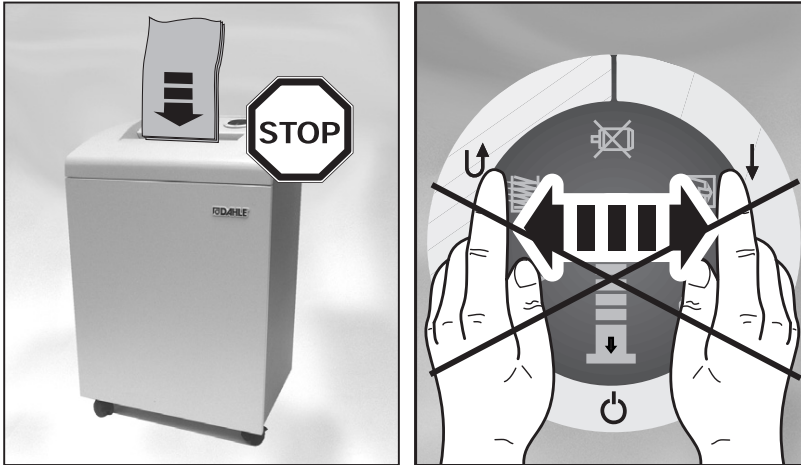

1. If there are too many sheets of paper, the shredding process is stopped.
2. The shredding mechanism automatically runs in reverse for a short time and the paper is ejected.
3. ATTENTION! To avoid damaging the shredding mechanism, do not operate the forward-reverse switch alternately!

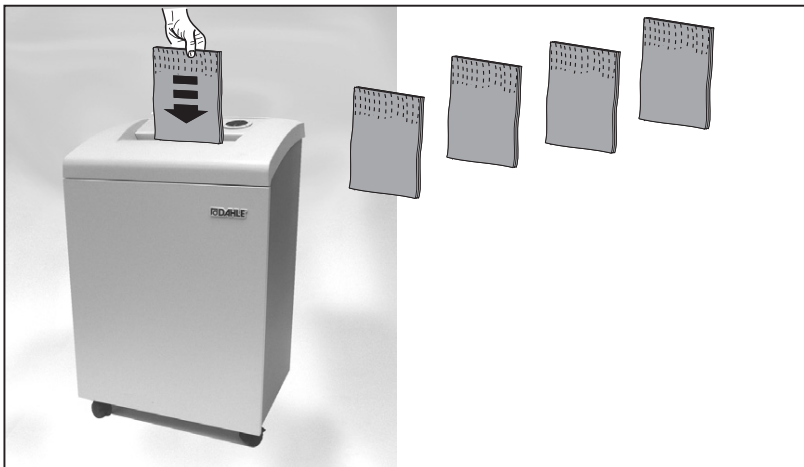

4. If paper continues to be jammed, operate the Reverse button briefly.
5. Reduce the number of sheets of paper by removing or tearing off.
6. The shredding process starts automatically after the paper is inserted again, otherwise operate the Forward button.

### 41334, 41434, 41534, 41634

1. In the event of a paper jam, the shredding mechanism runs in reverse for 0.5 seconds.
2. Remove the paper. Then operate the Forward switch to clear the shredding mechanism.  
The Reverse switch is inhibited until the Forward switch has been actuated.
3. Reduce the number of sheets of paper.

## Possible malfunctions

Depending on the model variant, your document shredder may not have all the possible components and functions.

### Energy-saving mode

#### 4.

If not used, the document shredder switches to the energy saving mode (flashing LED) after approx. 10 minutes. On renewed use, the document shredder requires approx. 3 seconds to start.

In the energy-saving mode the document shredder switches off if it is not used after approx. 20 minutes (LED off). To use the document shredder, switch it back on with the On, Off, Stop button.



## Maintenance and care

Use only DAHLE spare parts!

#### 1.



1. Switch off the document shredder and unplug the mains cable from the mains socket.
2. Only clean the appliance with a dry cloth.
3. Plug the mains cable into the mains socket, switch on the document shredder.

**Dahle Bürotechnik GmbH**  
**Postfach 11 10**  
**96466 Rödental | Germany**  
**Nikolaus-A.-Otto-Straße 11**  
**96472 Rödental | Germany**  
**Tel.: +49 9563 75299-0**  
**Fax: +49 9563 75299-333**  
**E-Mail: [dahle@dahle.de](mailto:dahle@dahle.de)**  
**Internet: [www.dahle.de](http://www.dahle.de)**