


HEAT SEAL H - 800 PRO- R / IBICO 2700 LAMINATORS

PARTS LIST


8.0 PARTS
Figure 8.0

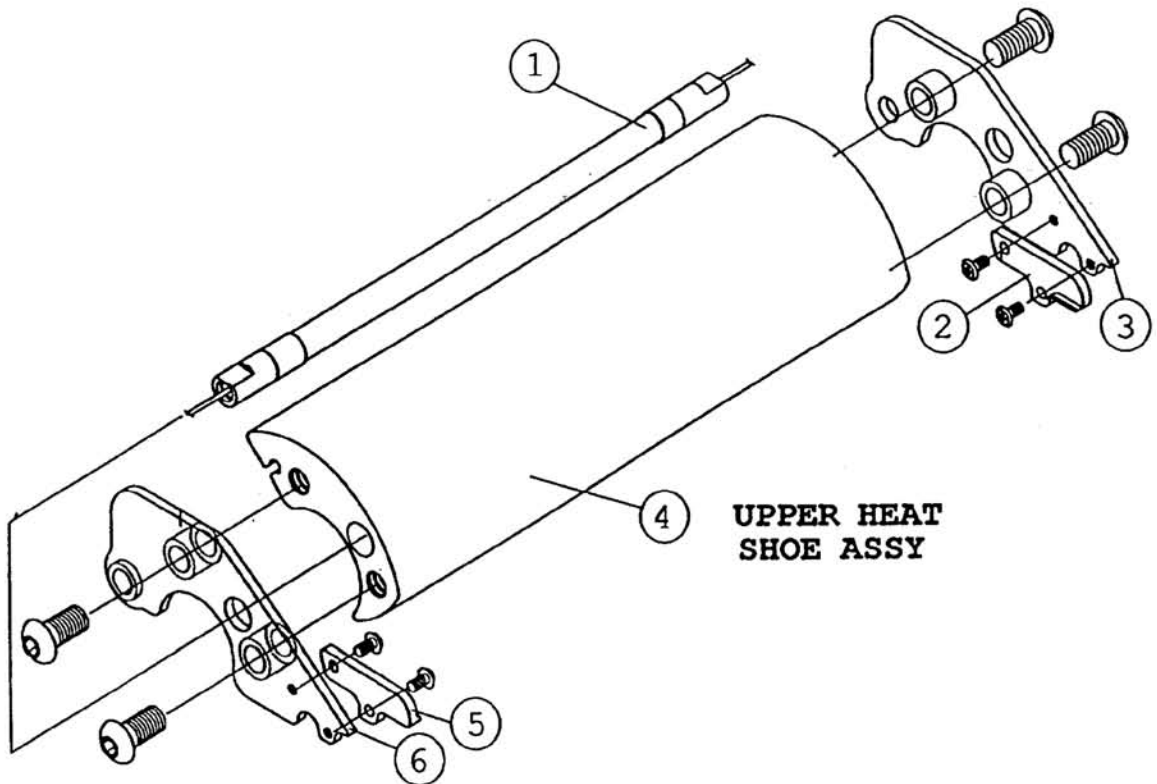

ITEM NO.	PART NO.	DESCRIPTION	QTY
1	706111507	Infrared Heater	2
2	604020355	Upper Heat Shoe Lever (R)	1
3	601211188	Upper Heat Shoe Guide Plate (R)	1
4	604030417	Heat Shoe	2
5	604020354	Upper Heat Shoe Lever (L)	1
6	601211187	Upper Heat Shoe Guide Plate (L)	1
7	630800125	Heat Seal 800 Pro- R shoe Cover	1
8	811600099	Heat Seal LOGO sticker	2

8.0 PARTS


Figure 8.1

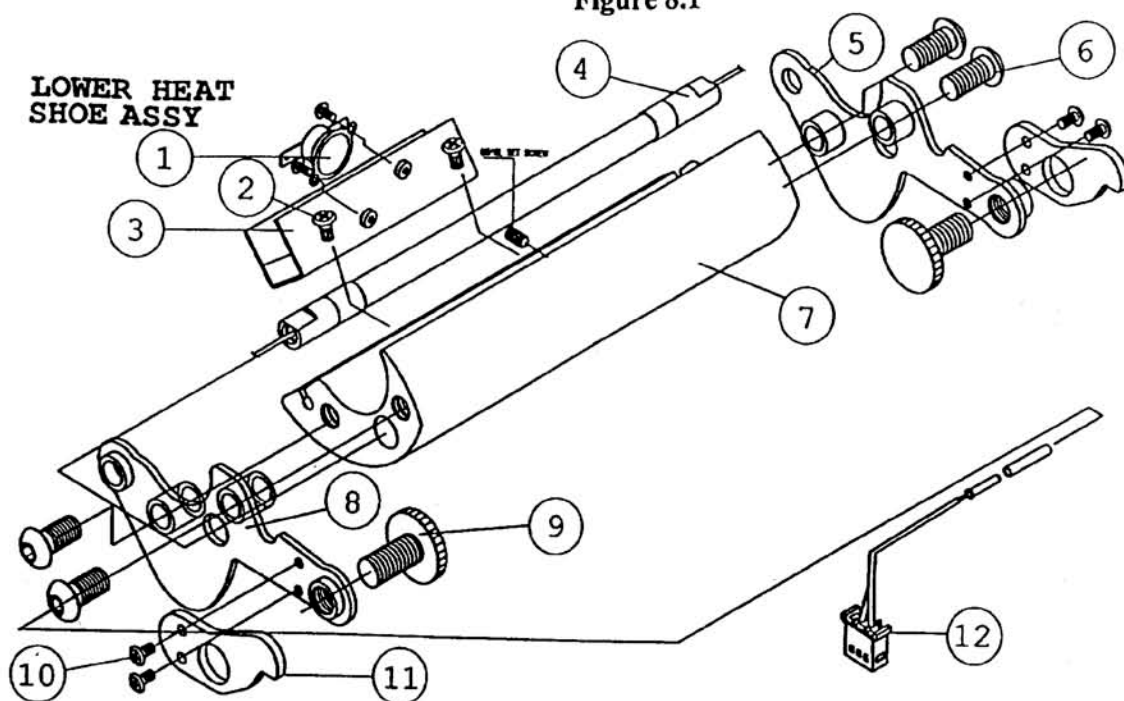

ITEM NO.	PART NO.	DESCRIPTION	QTY
1	704150101	130° C Thermostat	1
2	701109114	Screw	2
3	601211180	Thermostat Bracket	1
4	70111506	Infrared Heater	2
5	601211190	Heat Shoe Guide Plate,(RH) Lower	1
6	701107621	Screw	8
7	604030417	Heat Shoe	2
8	601211189	Heat Shoe Guide Plate,(LH) Lower	1
9	613011014	Heat Shoe Clamping Bolt	2
10	701104903	Screw	4
11	604020356	Heat Shoe Lever (lower)	2
12	706040212	Sensor Assy.	1
	638001913	Heater Wire	
	638001914	Heater Wire	

Heater Wires do not come with Infrared Heaters


8.0 PARTS
Figure 8.2

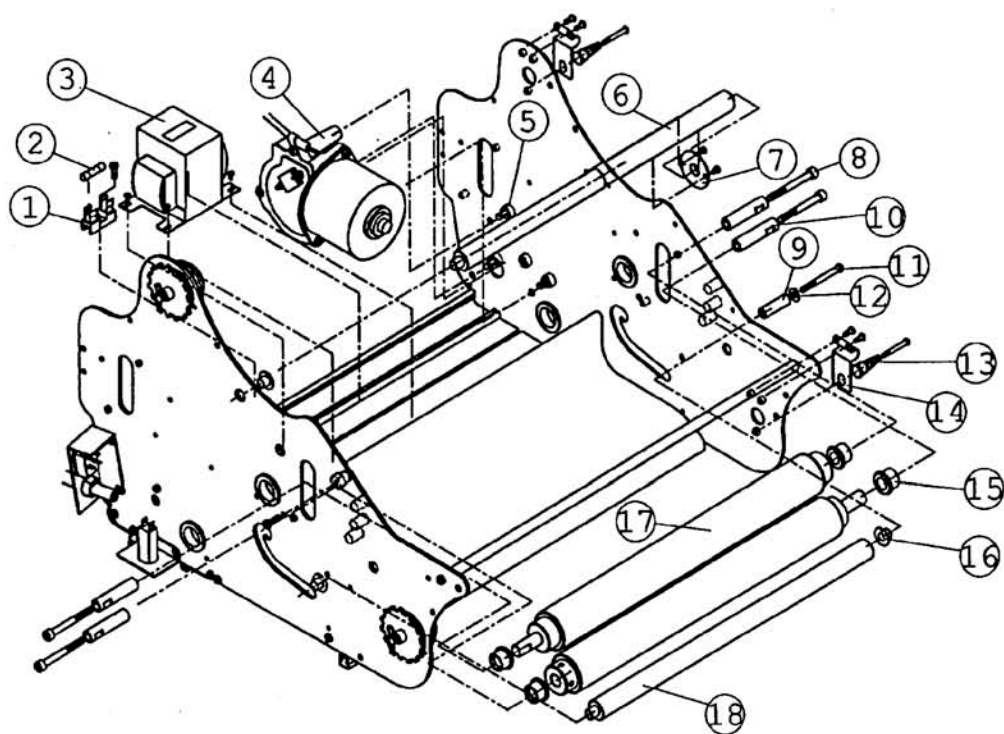

8.0 PARTS**Figure 8.2**

ITEM NO.	PART NO.	DESCRIPTION	QTY
1	704120201	Fuse holder	1
* 2	704130117	3.6 amp fuse (Older Machines)	1
3	610011901	120v Transformer	1
3	610011902	230v Transformer	1
4	6090202	DC Gear Motor	1
5	701107404	Motor Mounting Bolt	3
6	613030161	Upper Idler Roller	1
7	601230804	Upper Idler Housing	1
8	701107416	Shoulder Bolt ,Roller	4
9	613030540	Idler Centered Pin	1
10	613030539	Centered Pin, Roller	4
11	701101628	Shoulder Bolt, Idler	2
12	701110204	Washer	2
13	701090158	Supply Shaft Tension Spring	2
14	601230802	Film Shaft Support Plate	2
15	613040131	Roller bushing	8
16	701050234	Bearing Flange	4
17	607040561	Front Roller	2
18	613030162	Lower Idler Roller	1
* 2	704091041	4 Amp Circuit Breaker (New Machines)	1

8.0 PARTS
Figure 8.3

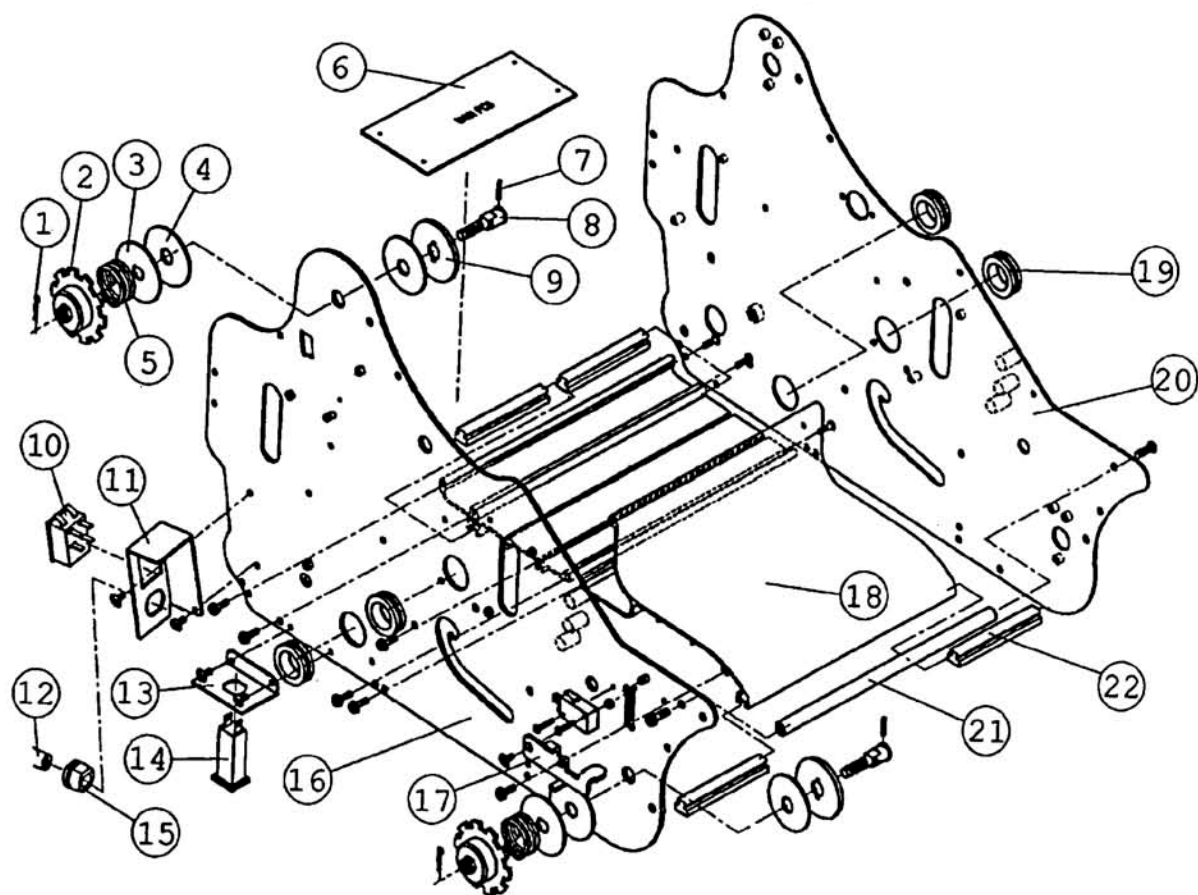


8.0 PARTS**Figure 8.3**

ITEM NO.	PART NO.	DESCRIPTION	QTY
1	701091102	Locking Clip	2
2	601310512	Tension Adjust Plate	2
3	601230702	Inside Tension Disc	2
4	703070101	Friction Disc	4
5	701090142	Film Tension Spring	2
6	706011021	Main PCB	1
7	701090832	Roll Pin	2
8	613030537	Film Tension Bolt	2
9	601230713	Outside Tension Disc	2
10	704090102	Power Switch	1
11	601310506	Power Switch Bracket	1
12	704031015	Power Cord ,120v	1
12	704031116	Power Cord, 230v	1
13	601310507	Circuit Breaker Bracket	1
14	704091046	Circuit Breaker 12 amp(120v)	1
14	704091043	Circuit Breaker 12 amp (240v)	1
15	704140403	Strain Relief	1
16	601210236	Left Side Plate	1
17	601310505	Film Tension Adjust Lever	2
18	604034897	Front Base Plate	1
19	703010209	Rubber Bushing	4
20	601210237	Right Side Plate	1
21	613030151	Tie Bar	1
22	703010111	Rubber Foot	4


8.0 PARTS

Figure 8.4

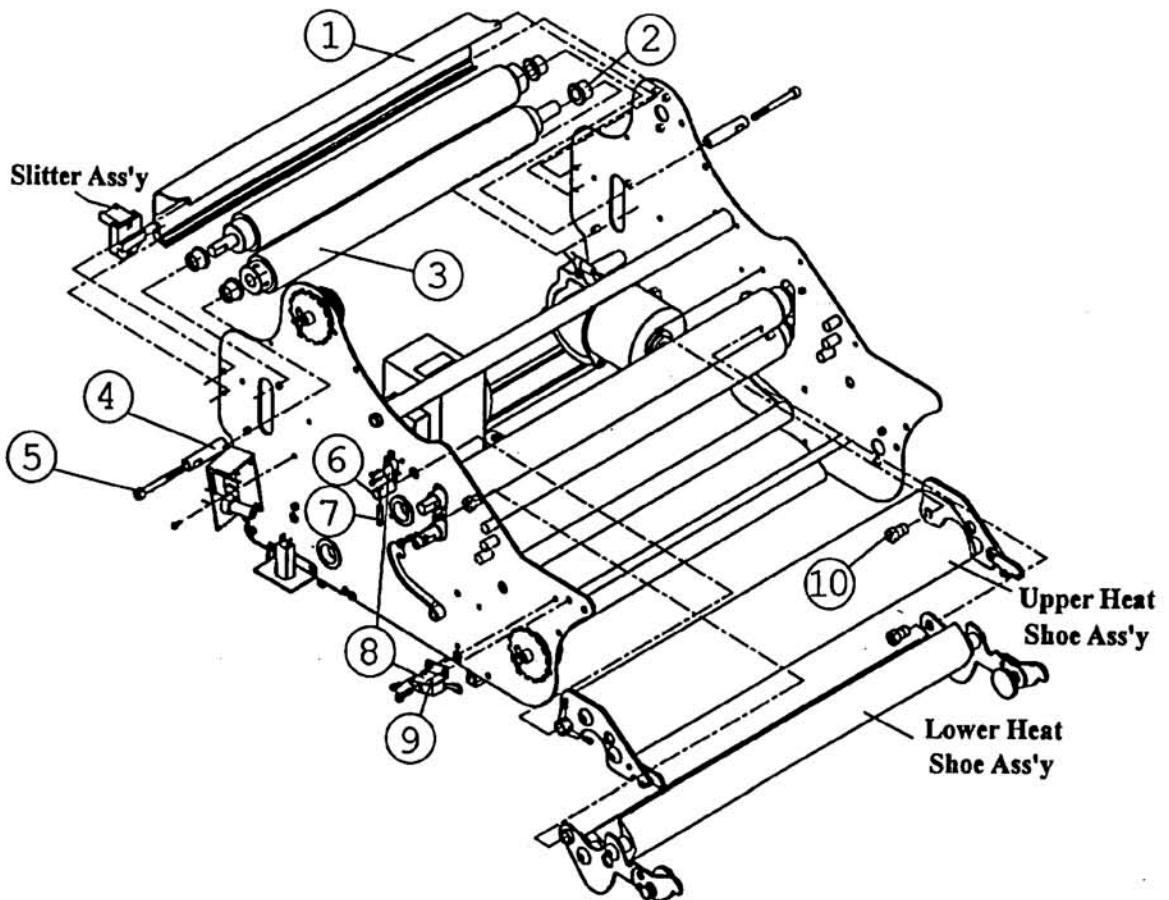

ITEM	PART	DESCRIPTION	QTY
1	604034892	Blade Rail	1
2	613040131	Roller Bushing	8
3	607040562	Rear Roller	2
4	613030539	Centered Pin, Rear Roller	2
5	701107416	Hex Head Bolt	2
6	613030325	Shoe Hinge Pin	1
7	701090845	Roll Pin	1
8	704090414	Microswitch	2
9	601310508	Microswitch Bracket	1
10	613011310	Shoe Support Pin	3


8.0 PARTS
Figure 8.5

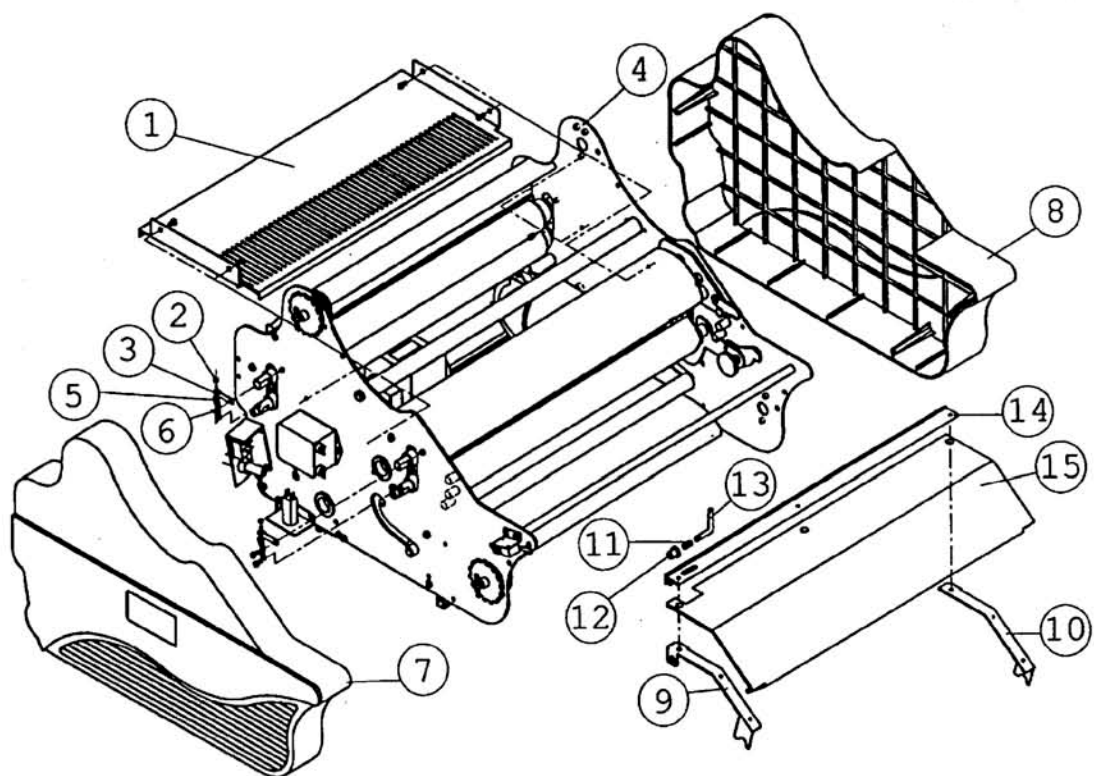

8.0 PARTS
Figure 8.5

ITEM NO.	PART NO.	DESCRIPTION	QTY
1	601230992	Film Screen Guide	1
2	701110105	Roller Tension Nut	4
3	601310509	Roller Tension Lever (L)	2
4	601310510	Roller Tension Lever (R)	2
5	613030538	Roller Tension Bolt	4
6	701090157	Roller Tension Spring	4
7	604020351	Side Cover (L)	1
8	604020352	Side Cover (R)	1
9	601211115	Shoe Cover Bracket (L)	1
10	601211116	Shoe Cover Bracket (R)	1
11	701090156	Spring	1
12	613030614	Lever Cap	1
13	613011317	Shoe Cover Lever	1
14	604034874	Shoe Cover Support (2700)	1
15	601230454	Shoe Cover (2700)	1

8.0 PARTS
Figure 8.6

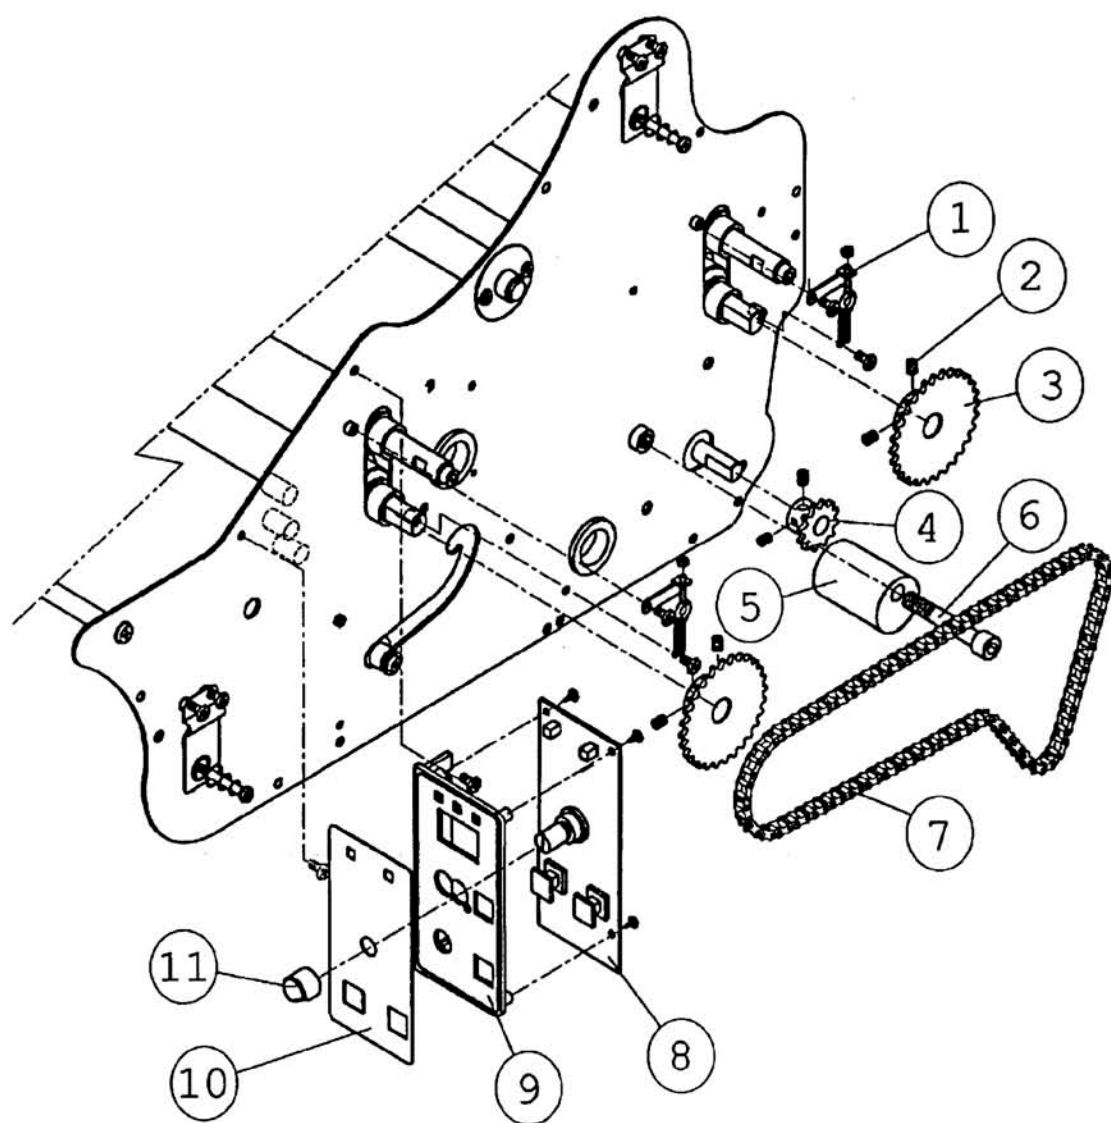


8.0 PARTS

Figure 8.6

ITEM	PART NO.	DESCRIPTION	QTY
1	601310510	Tension Lever (R)	1
2	701106303	Set Screw	6
3	701080233	20 T Chain Gear	2
4	701080265	12 T Chain Gear	1
5	703040206	Chain Take Up	1
6	701107511	Shoulder Bolt	1
7	701070156	Chain	1
8	706011024	Control Panel PCB	1
9	604020353	Plastic Control Panel	1
10	802102411	Control Panel Label	1
11	703021001	Knob	1

8.0 PARTS


Figure 8.7

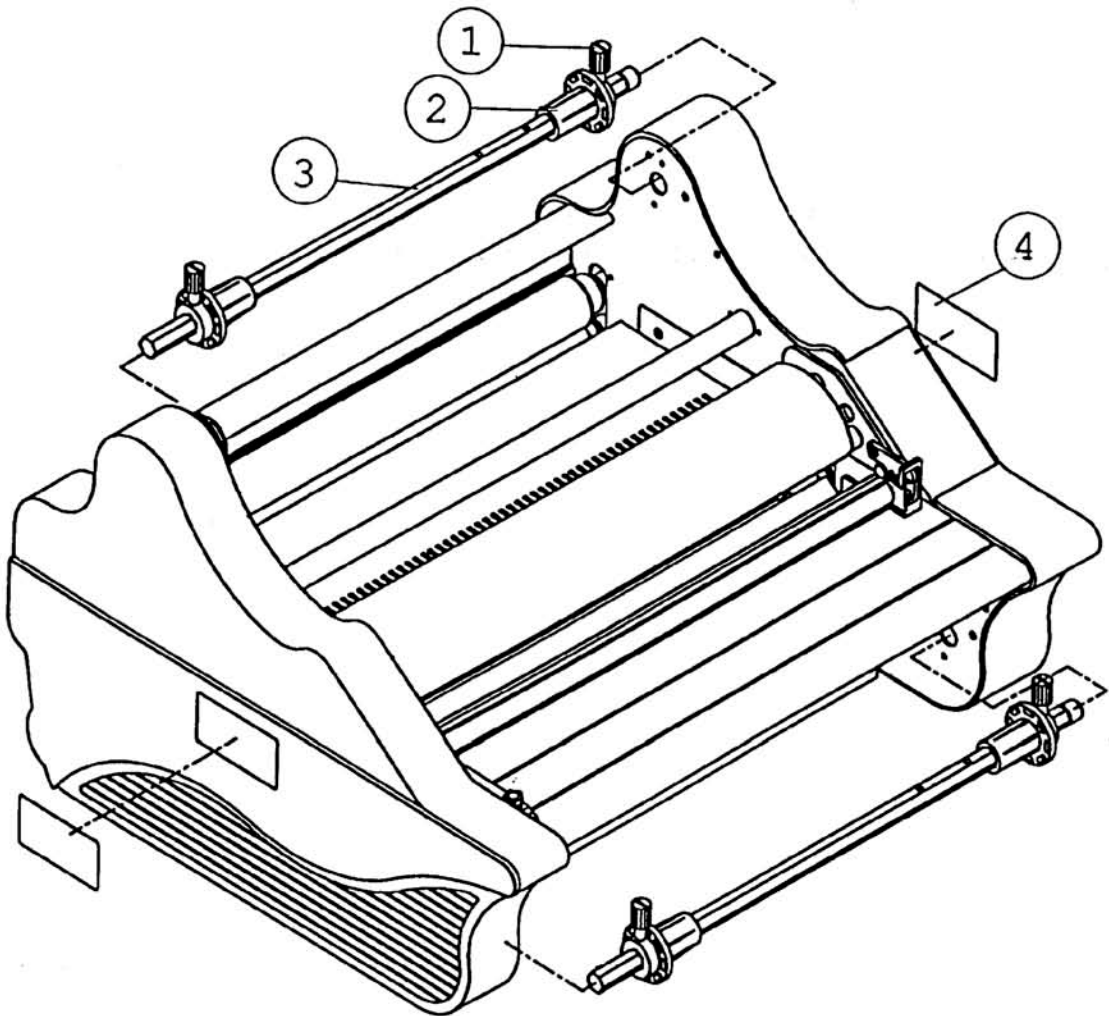

ITEM NO.	PART NO.	DESCRIPTION	QTY
1	613030527	Core Adaptor Bolt	4
2	604037021	1" Core Adaptor	4
3	613030211	Film Shaft	2
4	802026712	Side Cover Sticker	2

8.0 PARTS


Figure 8.8

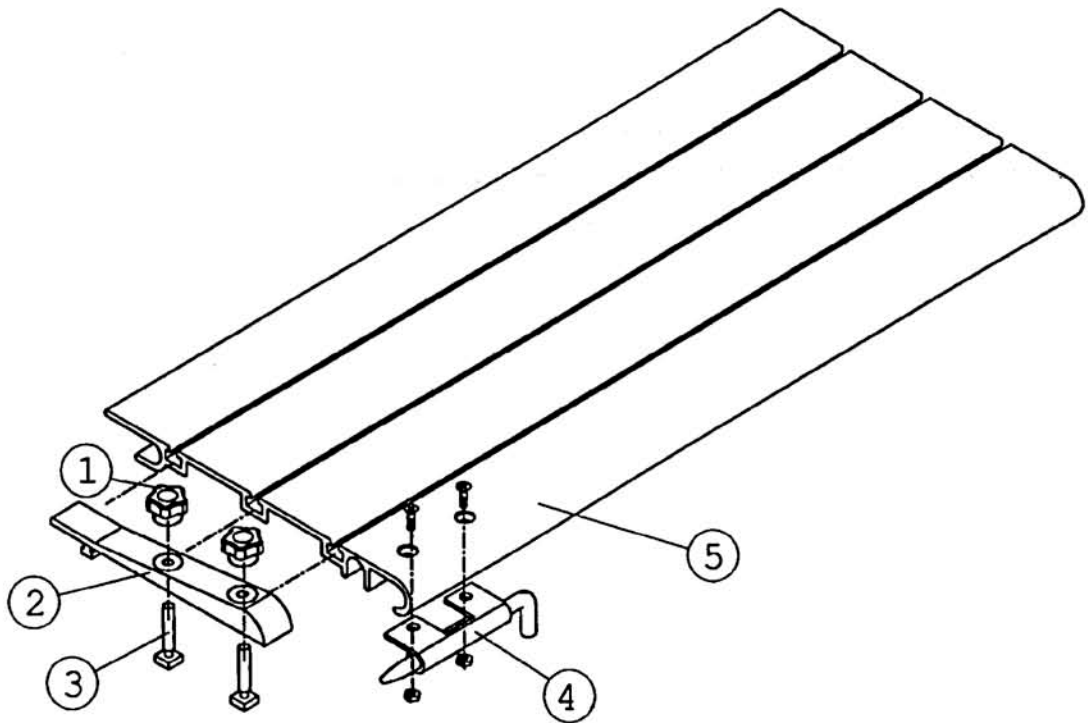

ITEM NO.	PART NO.	DESCRIPTION	QTY
1	604022032	Paper Guide Knob	2
2	6040220310	Paper Guide	1
3	701108131	Paper Guide Bolt	2
4	613030613	Feed Table Latch (PIN ONLY)	1
5	604036017	Feed Table	1


8.0 PARTS

Figure 8.9

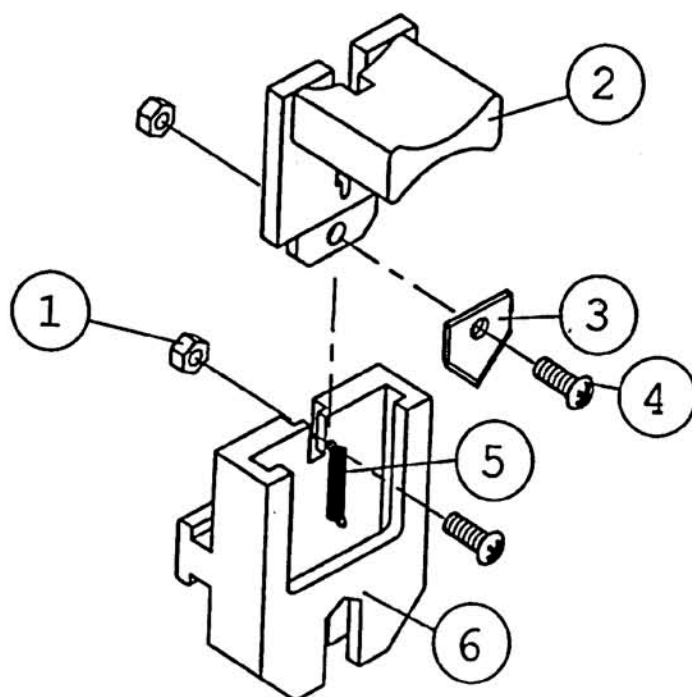

ITEM NO.	PART NO.	DESCRIPTION	QTY
1	701110101	Nut	2
2	604022034	Slitting Lever	1
3	613050221	Slitter Blade	1
4	701104803	Screw	2
5	701090159	Spring	1
6	604022033	Slitter Housing	1

8.0 PARTS
Figure 8.10

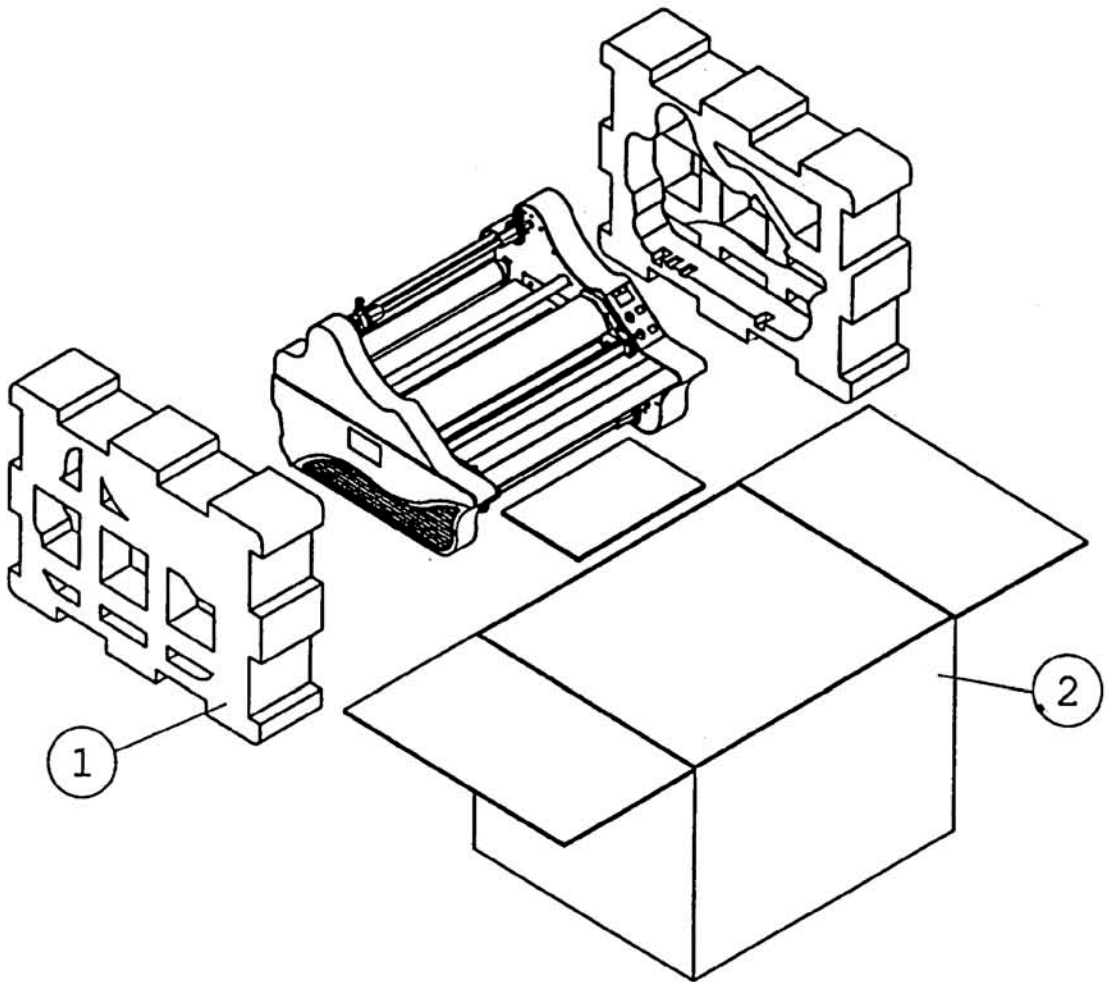

ITEM NO.	PART NO.	DESCRIPTION	QTY
1	8010425	End Cap	2
2	801010722	Carton	1
Not Shown	1722300	Docuseal 2700 Instruction Video	1

9.0 RECOMMENDED SPARE PARTS

PART NUMBER	DESCRIPTION	QTY. PER MACHINE
706111507	Infrared Heater Ass'y	2
604030417	Heat Shoe	2
706040212	Sensor Ass'y	1
704130117	3.6 Amp Fuse	1
610011901	120v Transformer	1
610011902	230v Transformer	1
6090202	DC Gear Motor	1
607040561	Front Roller	2
703070101	Friction Disc	4
704091046	Circuit Breaker 12 amp (120v)	1
704091043	Circuit Breaker 12 amp (240v)	1
704090102	Power Switch	1
703070111	Rubber Foot	4
613040131	Roller Bushing	8
607040562	Rear Roller	2
704090414	Microswitch	2
701070156	Chain	1
706011024	Control Panel PCB	1
701080233	20T Chain Gear	2
701080265	12T Chain Gear	1
613050221	Slitter Blade	1
706011021	Main PCB Ass'y	1